


Rear Seat Removal/Installation


NOTE:

- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Take care not to scratch the body or rear the seat covers.
- Right rear seat is shown, and left rear seat is similar.

1. Remove the headrests. Fold the seat-back forward, and slide the rear seat backward fully.
2. Remove the front seat track end covers from the front of both seat tracks.

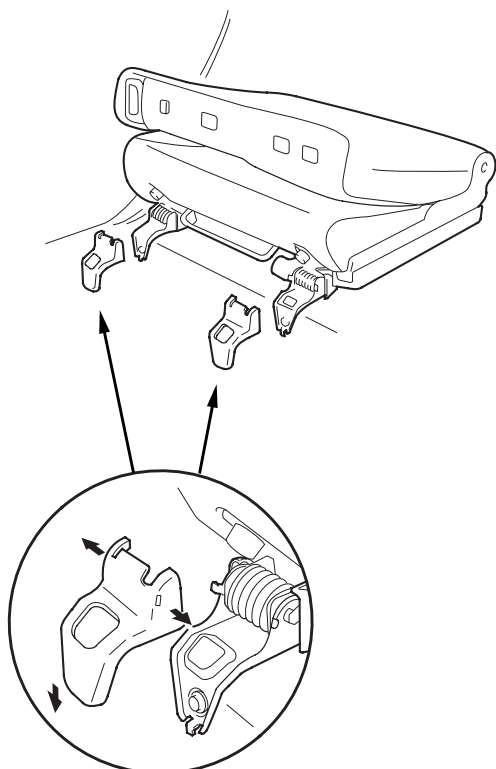

3. Unlock the rear seat and tip it up, then remove the rear seat track end covers from the back of both seat tracks. If the seat cannot be unlocked by pulling the strap, make the holes (A) in the back of both seat tracks as shown. Insert a flat-tip screwdriver over 100 mm (3.94 in.) through holes, and push both levers (B) to unlock the seat.


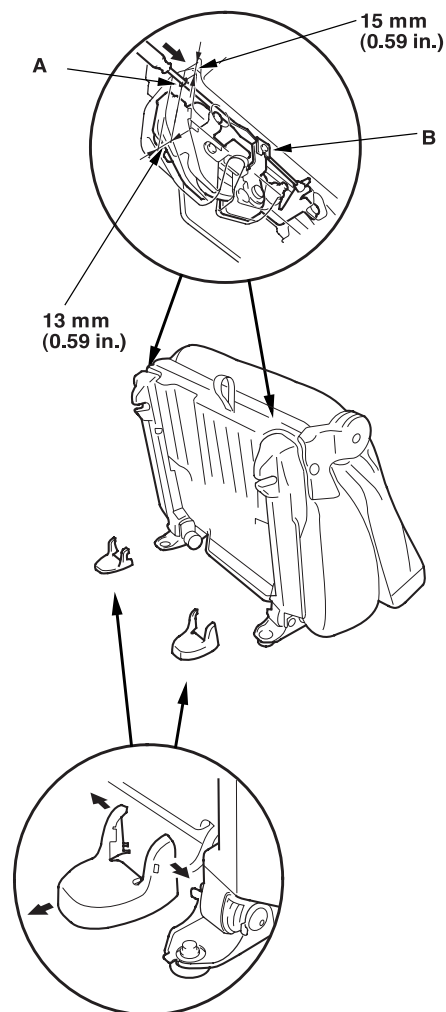




4. While holding the rear seat (A) up, remove the mounting bolt (B, C, D).

Fastener Locations

 B ► : Bolt, 1 C ► : Bolt, 2 D ► : Bolt, 1

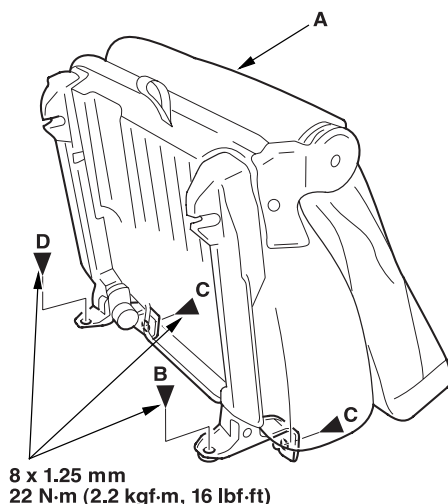


8 x 1.25 mm
22 N·m (2.2 kgf·m, 16 lbf·ft)

5. With the help of an assistant, remove the rear seat (A) through the door opening.
6. Install the rear seat in the reverse order of removal.



Rear Seat Armrest Replacement

NOTE: Take care not to tear the seams or damage the seat covers.

1. Remove the clip (A) from the right portion of the armrest pivot.

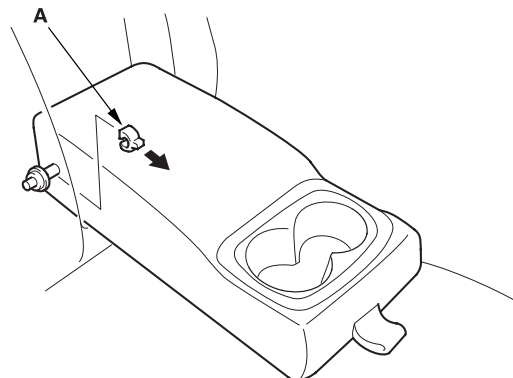

2. Remove the armrest.
 - Slide the armrest (A) toward the right, side.
 - Remove the left pivot shaft (B) from the collar (C), and remove the right pivot shaft (D) from the collar (E) by pulling the armrest back.

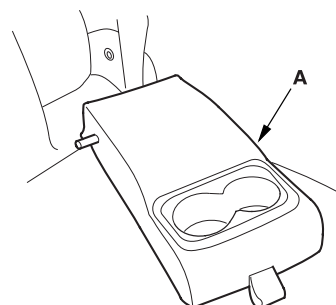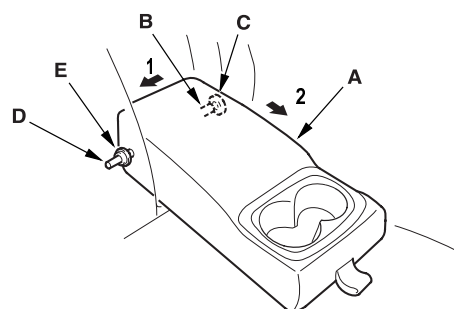

3. Install the armrest in the reverse order of removal.