



## Rear Door Panel Removal/Installation


### Special Tools Required

Trim pad remover, Snap-on A 177A or equivalent, commercially available.

1. Lower the glass fully.
2. Remove the inner handle (A). Take care not to scratch the door panel.
  - 1 Using a flat-tip screwdriver wrapped with protective tape, pry out on the upper portion of the cover (B) to release the hooks (C, D), then remove the cover.
  - 2 Remove the screws.
  - 4 Pull out the inner handle forward and out half-way to release the hook (E).
  - 2 Disconnect the inner handle rod (F).

#### Fastener Locations


► : Screw, 2

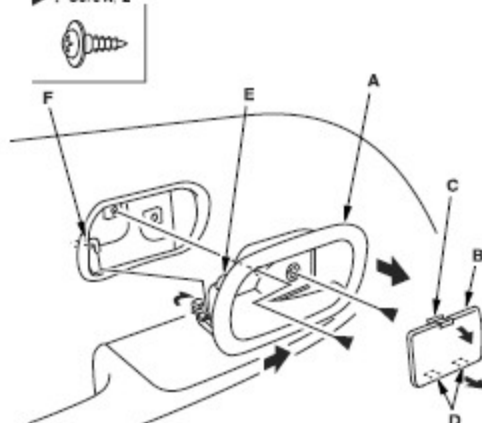

3. Remove the door quarter inner trim (A). Take care not to scratch the door.
  - 1 Using a flat-tip screwdriver wrapped with protective tape, insert it next to the pin, and detach the pin by prying on the trim while holding the hook portions. Take care not to break the hooks (B).
  - 2 Pull the trim forward to release the hooks.

#### Fastener Location


► : Pin, 1

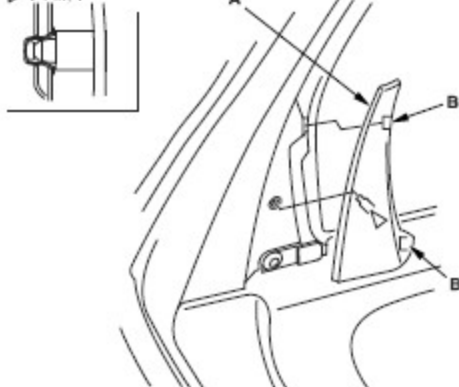

4. Remove the clip from the door quarter inner trim mounting portion.

#### Fastener Location

► : Clip, 1

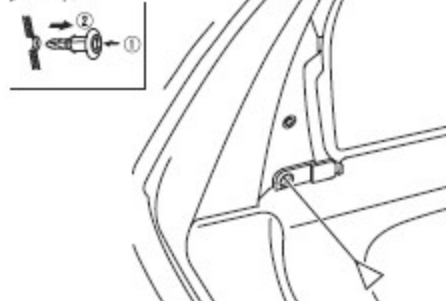

(cont'd)