




8. Form the back of the door panel, detach the harness clip (A). If equipped, disconnect the super locking control unit connector (B). RHD is shown, LHD is symmetrical except it has no super locking control unit.

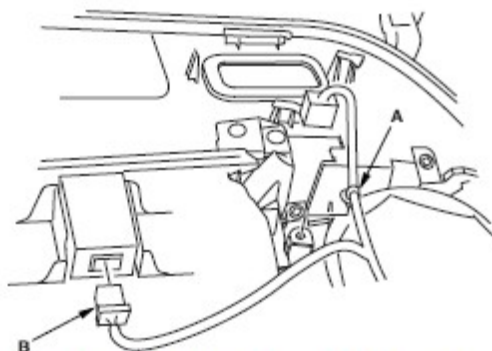

9. Install the panel in the reverse order of removal, and note these items:
- Replace any damaged clips.
 - Make sure the connector (s) is plugged in properly and the rod is connected properly.


Rear Door Outer Handle Replacement

NOTE : Put on gloves to protect your hands.

1. Remove these items:
 - Door panel (see page 20-21)
 - Plastic cover, as necessary (see page 20-6)
2. Raise the glass fully.
3. Remove the screws, and release the hooks (A), then remove the rod protector (B).

Fastener Locations

►: Screw, 2

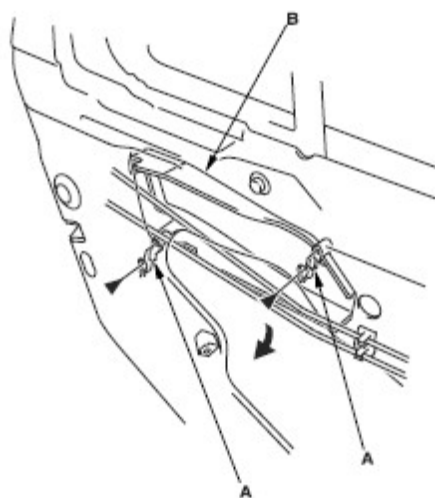

(cont'd)