



## Front Seat-back Cover/Pad Replacement

SRS components are located in this area. Review the SRS component locations (see page 24-13) and the precautions and procedures (see page 24-15) before doing repairs or service.


- Check the operation of the driver's seat position sensor after any of these actions (see page 24-31):
  - Driver's seat position sensor replacement
  - Cover plate (front side of driver's seat slide rail) replacement
- Calibrate the ODS unit after any of the these actions (see page 24-29):
  - Front passenger's seat replacement (including any seat components)
  - Replacement of the seat weight sensors
  - After a vehicle collision

### NOTE:


- Take care not to tear the seams or damage the seat covers.
- On the passenger's seat, do not touch the ODS sensor in the seat-back pad, and keep it away from oil. Oil can corrode the sensor causing it to fail.
- Put on gloves to protect your hands.

1. Remove the front seat (see page 20-118).
2. Passenger's seat: Remove the front seat under tray (see page 20-128).
3. Remove the armrest (see page 20-121).
4. Remove the head restraint.
5. From under the seat cushion, detach the side airbag connector clip (A) and seat heater connector clip (driver's seat) (B), then remove the wire harness ties (C).

### Passenger's seat

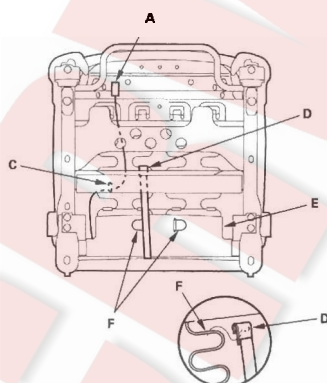


### Driver's seat

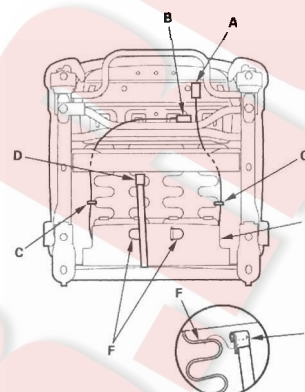

6. Release the hook (D) and the slit in the seat cushion cover (E) from the seat cushion frame spring (F), then pull the cover back.
7. Using the appropriate trim tool, pry out the clips (A) to release the lower portion of the back cover.

### Fastener Locations

A ▷ : Clip, 2

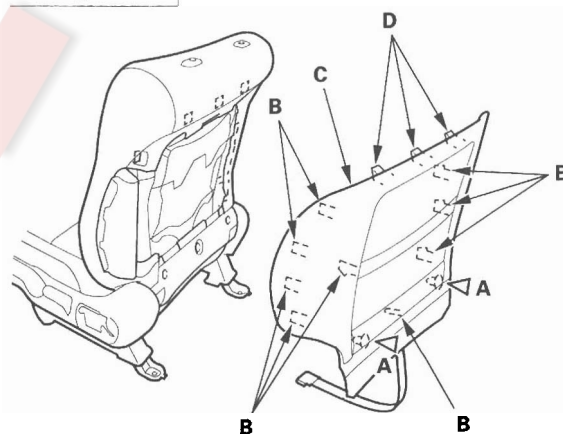


8. Detach the clips and hooks (B) by pulling the bottom of the back cover (C) back, then gently pull down the cover to release the hooks (D) from the seat frame, and remove the panel.

(cont'd)


# Seats

## Front Seat-back Cover/Pad Replacement (cont'd)

9. Release the Velcro fasteners (A, B, C), and release the hooks (D), then pull the seat-back cover (E) back.

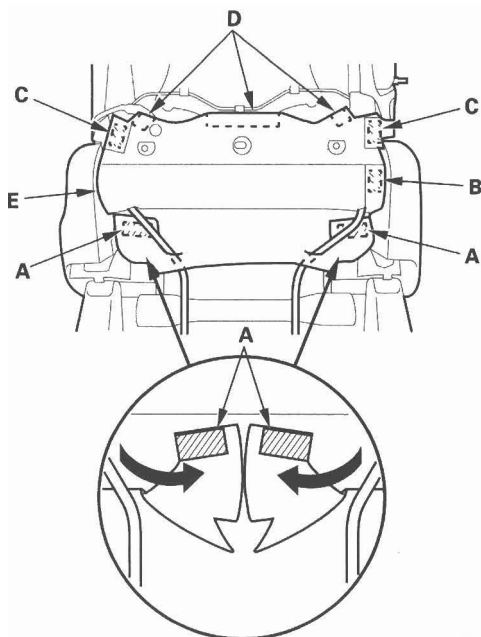


10. Pull the side airbag harness (A) out through the harness hole (B) in the seat-back cover and seat frame. Driver's seat is shown; passenger's seat is similar.

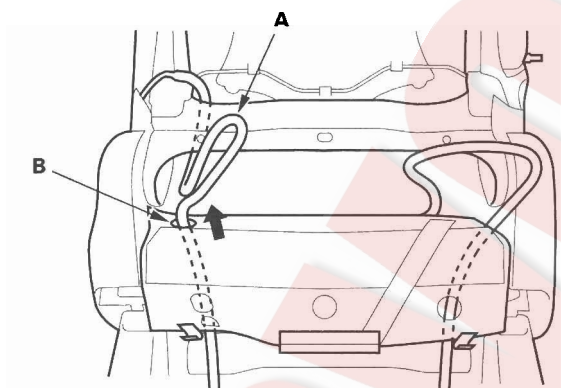


11. Remove the side airbag (see page 24-164).

12. Release the hook strips (A), then loosen the seat-back cover (B). Driver's seat is shown; passenger's seat is similar.

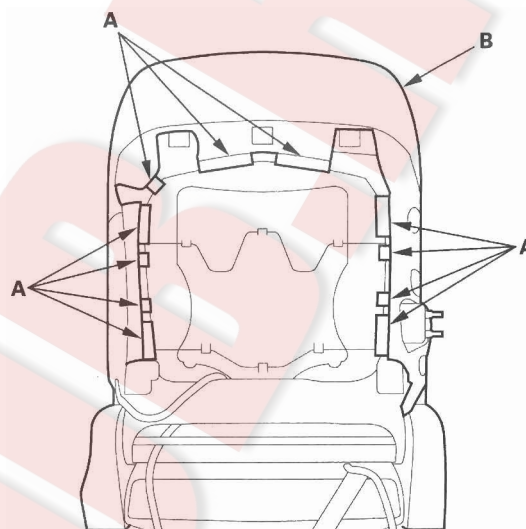


13. Turn over the reinforcing cloth (A), then release the hooks (B) from the module holder (C).

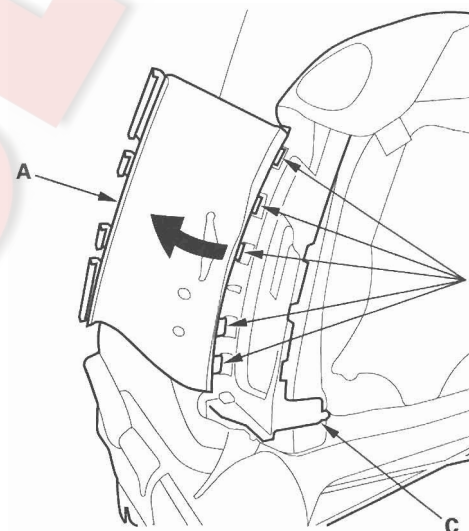





14. Passenger's seat: Disconnect the ODS sensor connectors (A) and ODS subharness connector (B) from the ODS unit (C), and pull them in through the hole in the seat frame. Detach the harness clips (D), and remove the wire tie (E).

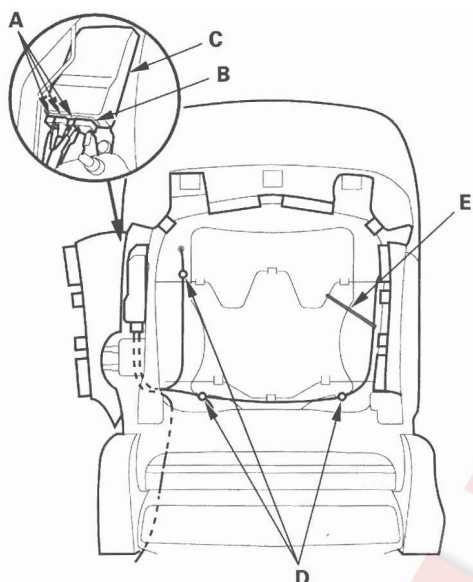


15. Pinch the tabs on the ends of the head restraint guides (A), and remove them from the seat-back.

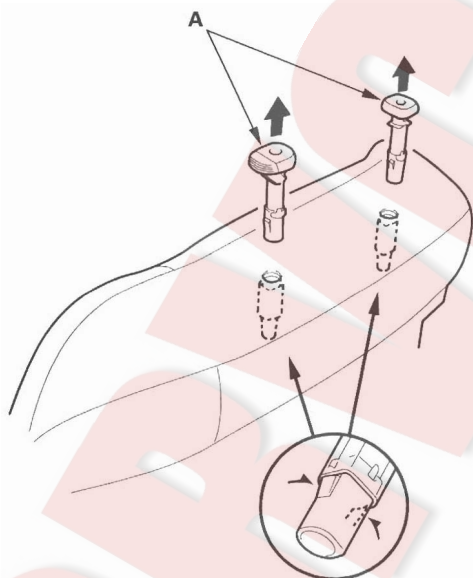

16. Remove the seat-back cover/pad (A) from the seat (B).

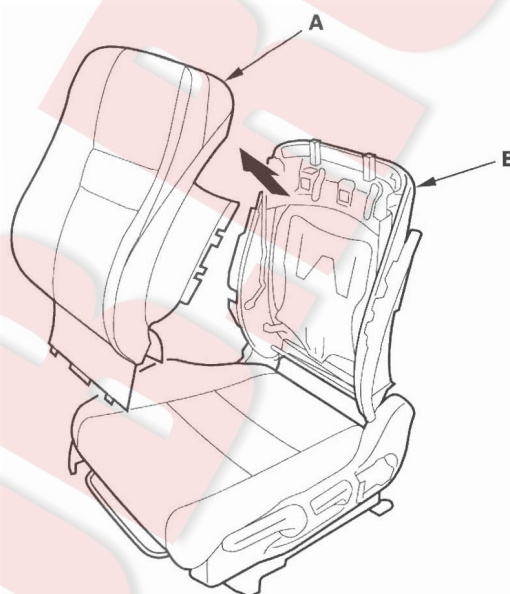

17. Pull back the edge of the seat-back cover all the way around, and release the clips (A), then remove the seat-back cover.


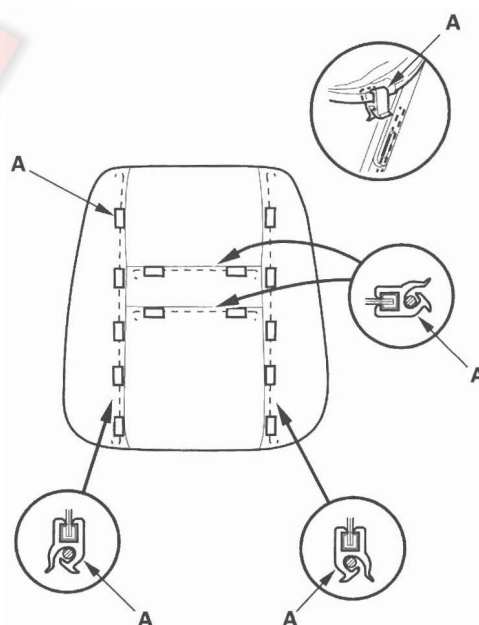


(cont'd)

## Front Seat-back Cover/Pad Replacement (cont'd)


18. Install the cover in the reverse order of removal, and note these items:

- Reinitialize the ODS unit (see page 24-28).
- To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the clips, hooks, and hook strips.
- Replace any clips (A) you removed with new ones.
- Before installing the side airbag (B), make sure the reinforcing cloth (C) is fixed on the seat-back frame (D) securely.
- Make sure the side airbag harness and ODS subharness (passenger's seat) are routed properly.

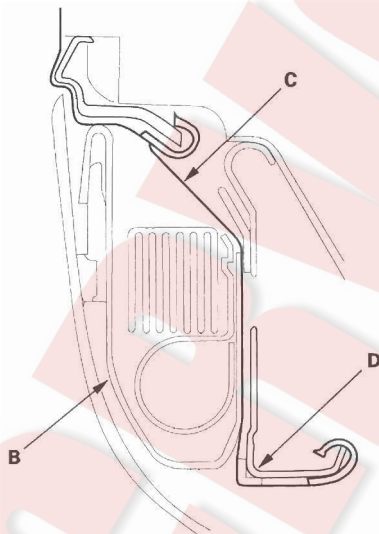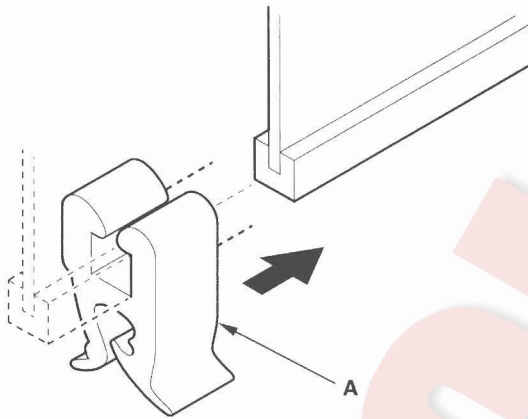

## Front Seat Under Tray Replacement

1. Open the under tray (A).

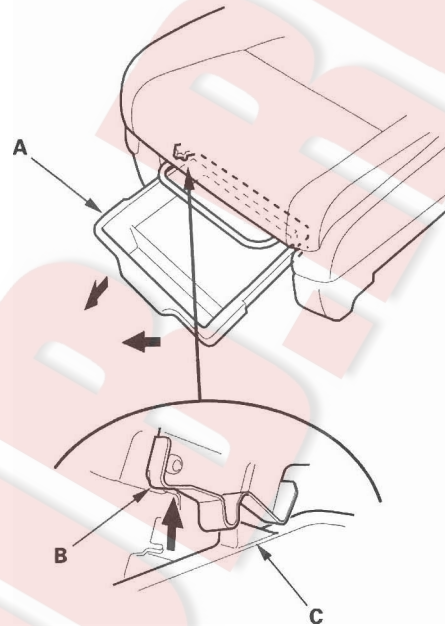

2. While pushing up on one of springs (B) on both guide rails, pull the under tray out until the stop (C) passes under the spring to remove one side of the tray from the guide rail.
3. Tilt the removed side of the under tray down, then pull another side of it off the guide rail.
4. Install the under tray by pushing it on to both guide rails until the springs snap into places.





## Front Seat Recline Cover Removal/Installation

### Special Tools Required

KTC trim tool set SOJATP2014 \*

\* Available through the American Honda Tool and Equipment Program; call 888-424-6857

SRS components are located in this area. Review the SRS component locations (see page 24-13) and the precautions and procedures (see page 24-15) before doing repairs or service.

### NOTE:

- Use the appropriate tool from the KTC trim tool set to avoid damage when prying components.
- Take care not to tear the seams or damage the seat covers.
- Put on gloves to protect your hands.

1. Remove the front seat (see page 20-118).


2. Passenger's seat: Remove these items:

- Woofer (for some models) (see page 23-80)
- Front seat belt buckle (see page 24-6)

3. Pull back the cap (A) to release the hooks (B), and remove the screws, then remove the height adjuster handle (C).

### Fastener Locations

► : Screw, 2

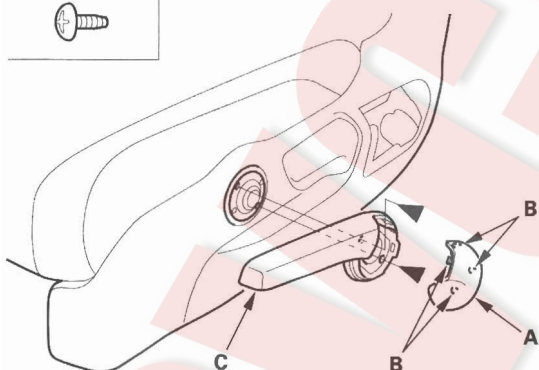


4. Remove the recline outer cover (A).


- 1 Remove the recline knob (B), and remove the screw.
- 2 Fold back the seat to fully.
- 3 Detach the clip by pulling the outer cover back by hand.
- 4 Using a trim tool, and release the hooks (C) along the upper edge of the outer cover.
- 5 Gently pull out the outer cover, and remove it to the back.

### Fastener Locations

 
► : Screw, 1    ▷ : Clip, 1



### Passenger's seat

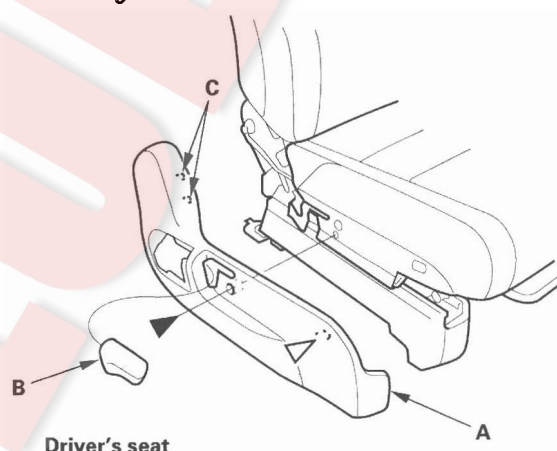

### Driver's seat

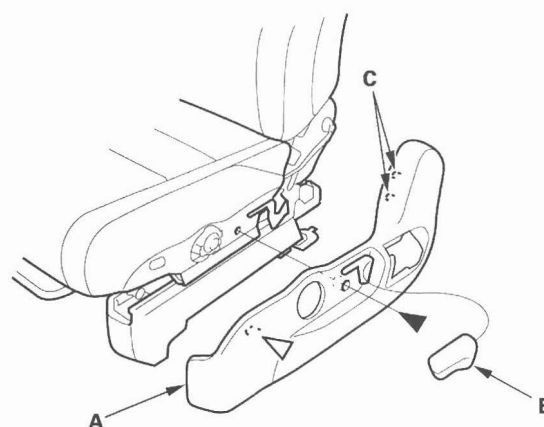

(cont'd)

# Seats


## Front Seat Recline Cover Removal/Installation (cont'd)

### 5. Remove the recline inner cover (A).

- 1 Carefully pry up the cap (B), and remove the screw.
- 2 Fold back the seat to fully.
- 3 Detach the clips by pulling the inner cover back by hand.
- 4 Using a trim tool, release the hooks (C) along the upper edge of the inner cover.
- 5 Gently pull out the inner cover, and remove it to the back.

#### Fastener Locations

► : Screw, 1    ▷ : Clip, 2

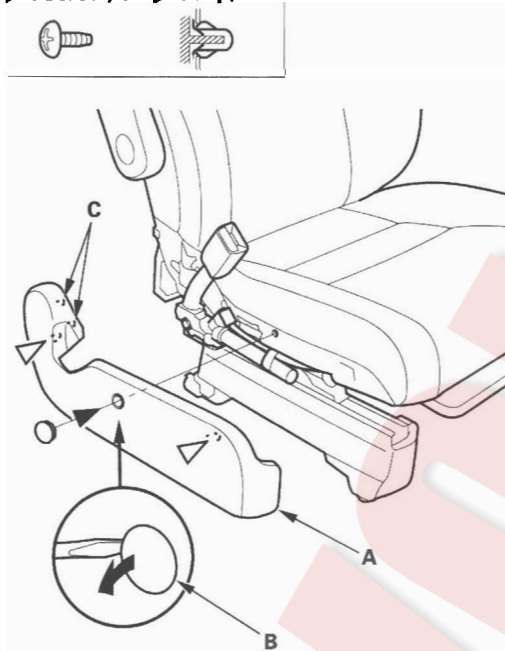

### 6. Install the recline covers in the reverse order of removal.

## Front Seat Cushion Cover/Pad Replacement

### Special Tools Required

KTC trim tool set SOJATP2014 \*

\* Available through the American Honda Tool and Equipment Program; call 888-424-6857

SRS components are located in this area. Review the SRS component locations (see page 24-13) and the precautions and procedures (see page 24-15) before doing repairs or service.

- Check the operation of the driver's seat position sensor after any of these actions (see page 24-31):
  - Driver's seat position sensor replacement
  - Cover plate (front side of driver's seat slide rail) replacement
- Calibrate the ODS unit after any of the these actions (see page 24-29):
  - Front passenger's seat replacement (including any seat components)
  - Replacement of the seat weight sensors
  - After a vehicle collision

#### NOTE:

- Use the appropriate tool from the KTC trim tool set to avoid damage when prying components.
- Take care not to tear the seams of damage the seat covers.
- Put on gloves to protect your hands.

### 1. Remove the front seat (see page 20-118).


### 2. Passenger's seat: Remove these items:

- Front seat under tray (for some models) (see page 20-128)
- Woofer (for some models) (see page 23-80)
- Center table (for some models) (see page 20-120)
- Front seat recline cover, both side (see page 20-129)
- Front seat belt buckle (see page 24-6)




3. Detach the seat subharness clip (A), and remove the wire tie (B), then disconnect seat heater connector (C) on the front seat. Release the hook (D) from the seat cushion frame springs (E), then turn over the seat-back cover.


#### Passenger's seat

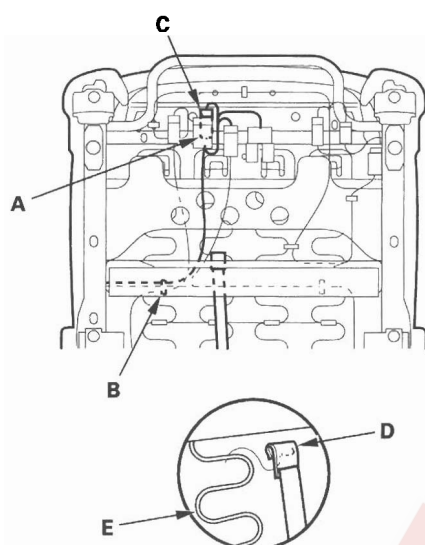

#### Driver's seat

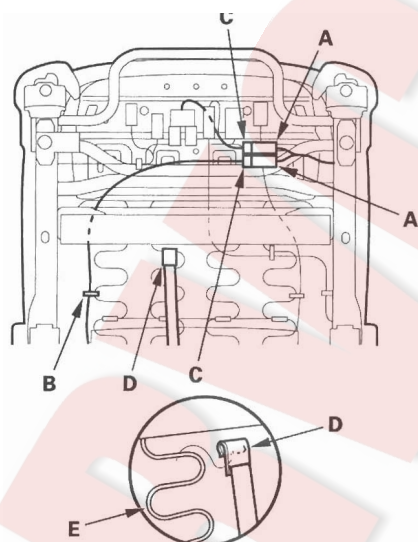


4. Release the seat cushion cover (A) from the seat cushion frame springs (B), then release the hook strips (C) from the seat frame (D).

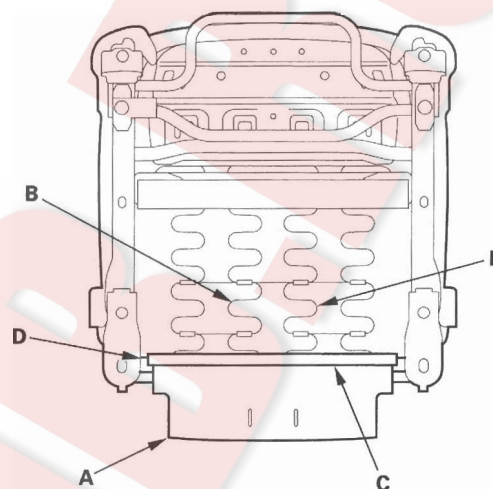

5. Remove the clip, then release the hook strips (A, B) from the seat frame (C).

#### Fastener Location

▷ : Clip, 1

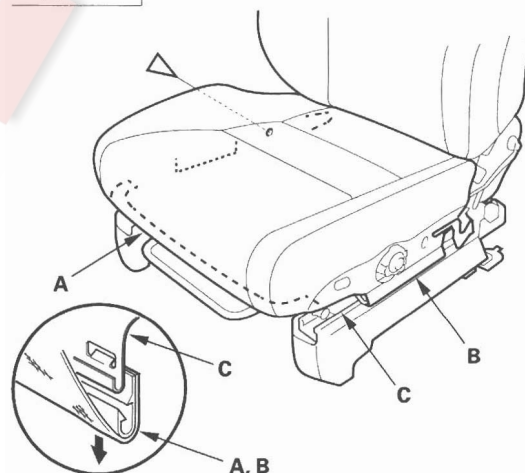


(cont'd)


# Seats

## Front Seat Cushion Cover/Pad Replacement (cont'd)


6. Remove the seat cushion/pad (A) from the seat frame (B).

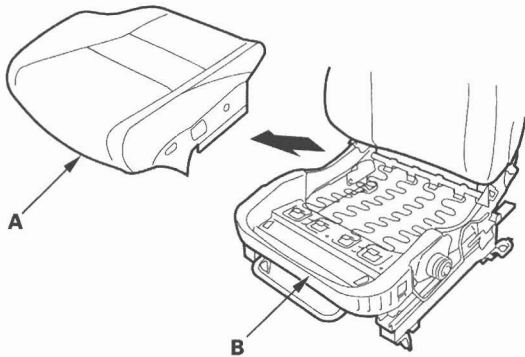

7. Release the hooks (A) from under the seat cushion (B).

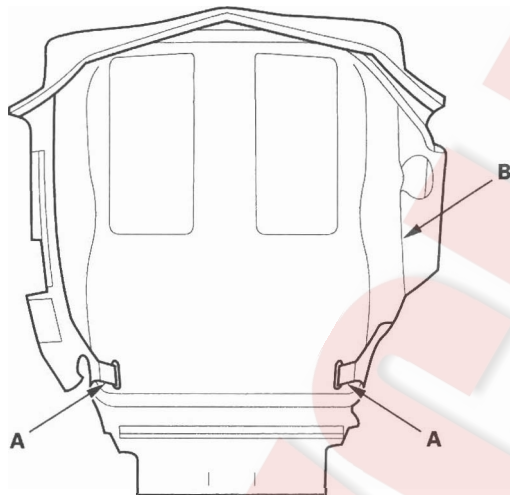


8. Pull back the edge of the seat cushion cover all the way around, and release the clips (A), then remove the seat cushion cover.

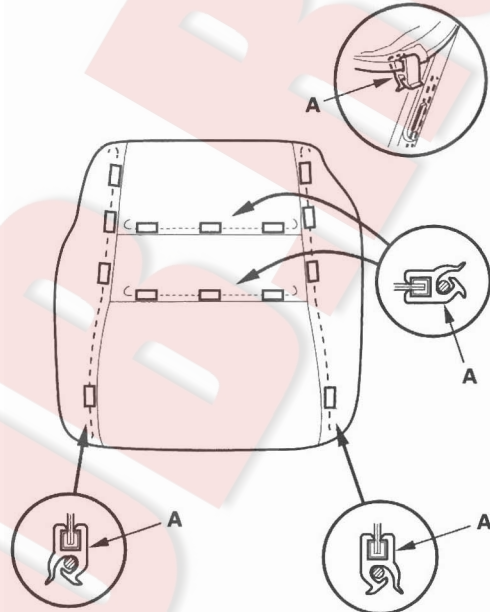

9. Install the cover in the reverse order of removal, and note these items:

- To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the clips, hooks, and hook strips.
- Replace any clips (A) you removed with new ones.

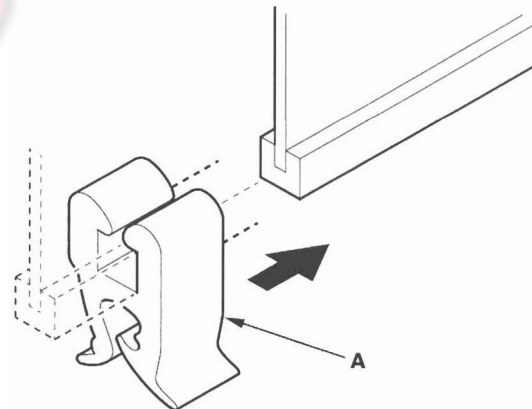







## Rear Seat Armrest Removal/Installation

**NOTE:** Take care not to tear the seams or damage the seat covers.


1. Remove the E-ring (A) from the right side portion on the armrest pivot.

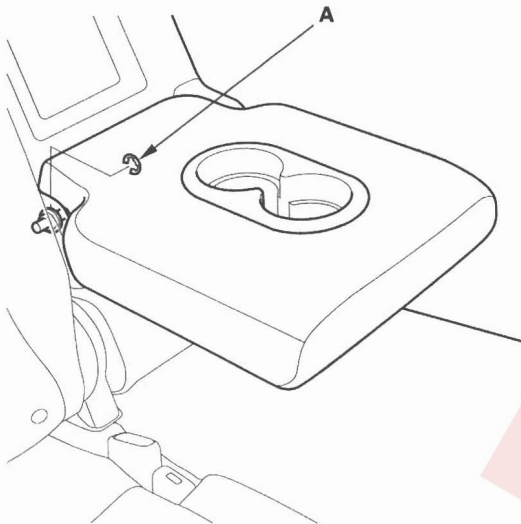

2. Slide the armrest (A) toward the right side, then release the left pivot shaft (B) from the bushing (C).

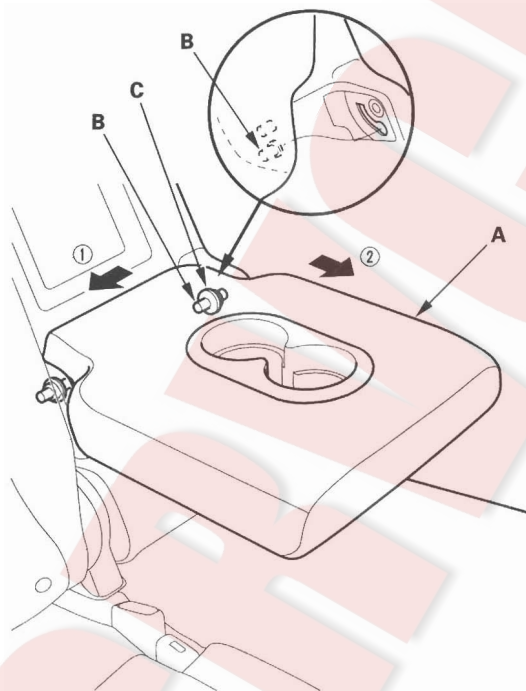

3. Release the right pivot shaft (A) from the bushing (B) by pulling the armrest back, and remove the armrest (C).

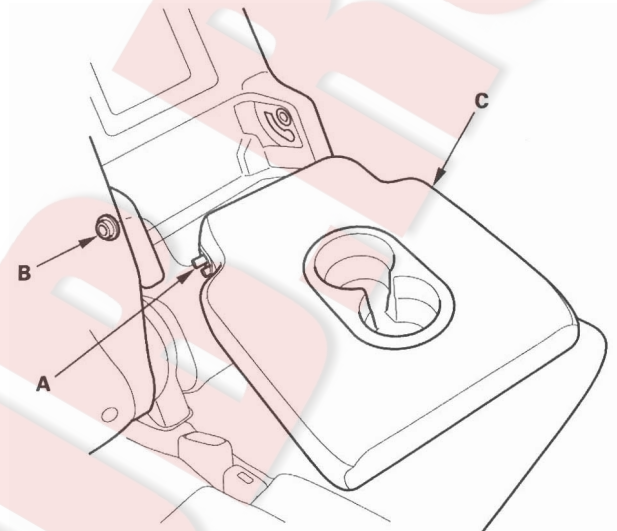

4. If necessary, remove the bushings from the frame both sides.

5. Install the armrest in the reverse order of removal.

## Rear Seat Armrest Cover Replacement

### Special Tools Required

KTC trim tool set SOJATP2014 \*

\* Available through the American Honda Tool and Equipment Program; call 888-424-6857


### NOTE:

- Use the appropriate tool from the KTC trim tool set to avoid damage when prying components.
- Take care not to tear the seams or damage the seat covers.


1. Remove the armrest (see page 20-133).

2. Remove the beverage holder (A).

- 1 Using a trim tool, push on the bottom ribs (B) of the left side hooks (C) to pull up the holder, then release the hooks from the wire (D).
- 2 Release the right side hooks (E) from the wire, then remove the holder.

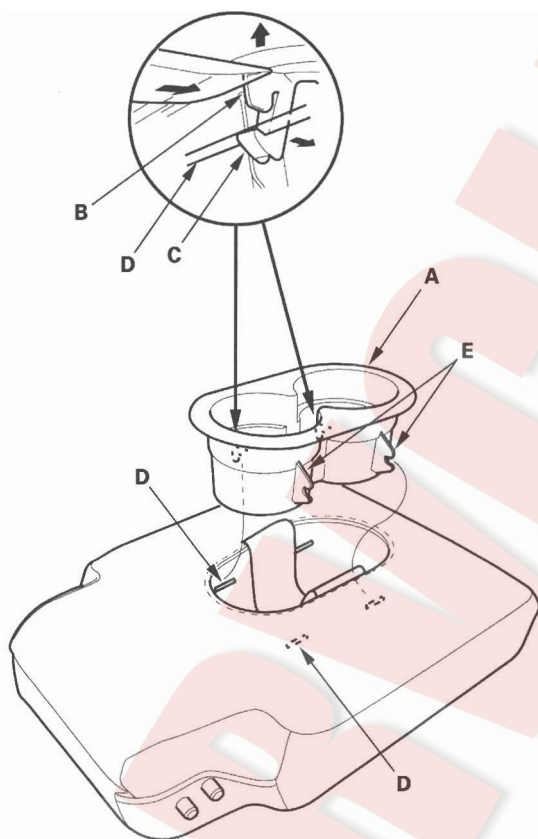

3. Release the hook (A), and pull back the edge of the armrest cover (B) all the way around, and remove it.

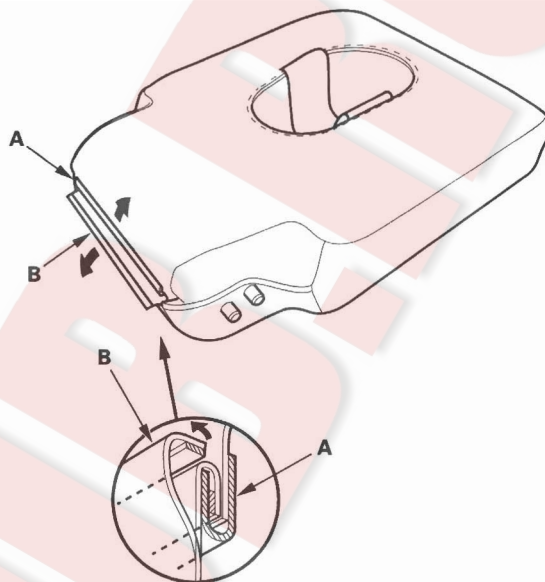

4. Install the cover in the reverse order of removal, and note these items:

- To prevent wrinkles, make sure the material is stretched evenly over the armrest before securing the hooks.
- Make sure the right side hooks are installed securely to the wire, then push down on the beverage holder and install the left side hooks into the wire securely.




## Rear Seat Removal/Installation


### NOTE:

- Put on gloves to protect your hands.  
Take care not to tear the seams or damage the seat covers.
- Have an assistant help you when removing and installing the rear seat.
- Right rear seat is shown, and left rear seat is similar.

1. Remove the head restraints.
2. Fold the seat-back forward, and slide the rear seat backward fully.
3. Remove the front seat track end covers (A) from the front of both seat tracks.

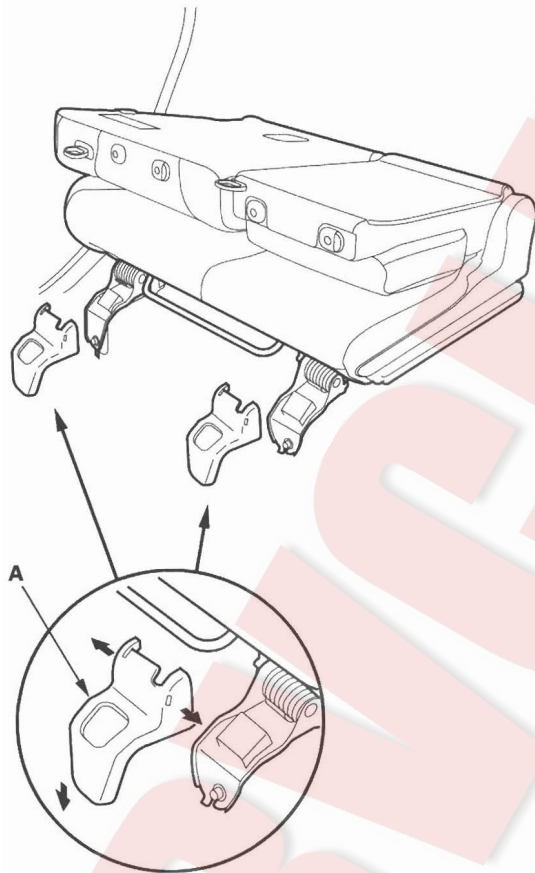

4. Unlock the rear seat and tip it up, then remove the rear seat track end covers (A) from the back of both seat tracks.

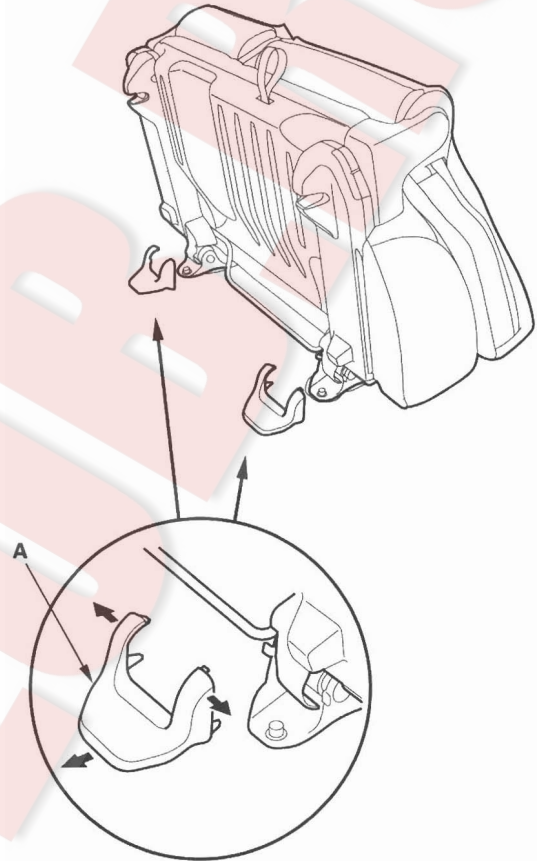

(cont'd)


# Seats

## Rear Seat Removal/Installation (cont'd)

5. While holding the rear seat (A) up, remove the mounting bolts.

### Fastener Locations

► : Bolt, 4

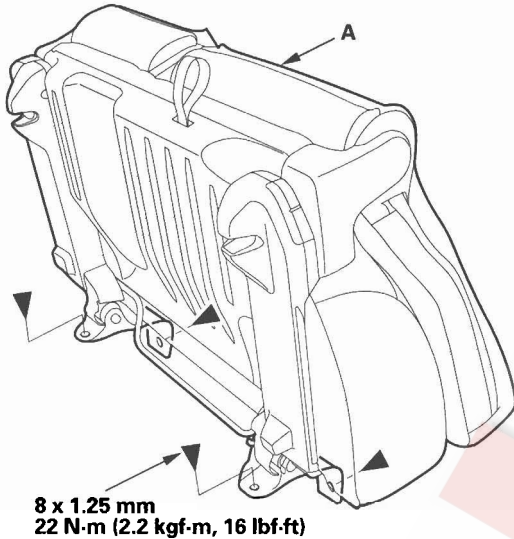

6. With the help of an assistant, remove the rear seat through the door opening.
7. Install the rear seat in the reverse order of removal.


## Right Rear Seat Cover Replacement

### NOTE:


- Take care not to tear the seams or damage the seat covers.
- Put on gloves to protect your hands.

### Seat-back Cover

1. Remove the right rear seat (see page 20-135).
2. Remove the rear seat armrest (see page 20-133).
3. Release the hooks (A), then remove the tether anchor cover (B).

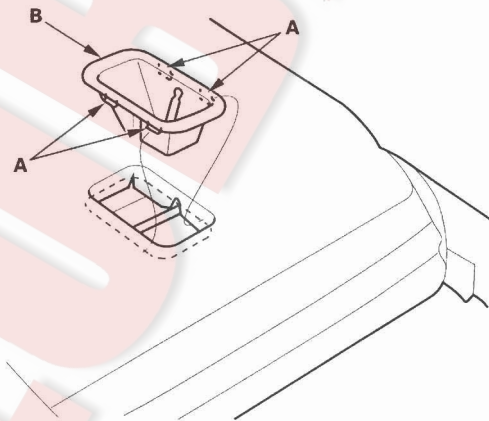

4. Release the bottom hook (A), unzip the seat-back cover (B), then fold back the cover. Pull the strap (C) secured on the seat-back frame inside the seat-back cover through the slot (D).

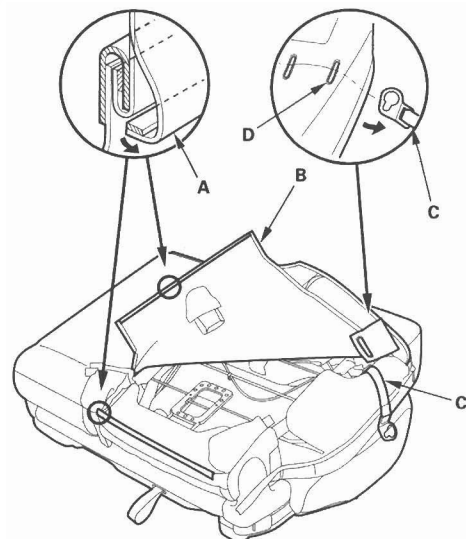







5. Pull back the edge of the rear center seat-back cover (A) all the way around, and release the hooks (B, C, D), then remove the back cover.

**Fastener Locations**

B ▷ : Hook, 6 C ▷ : Hook, 2 D ▷ : Hook, 2

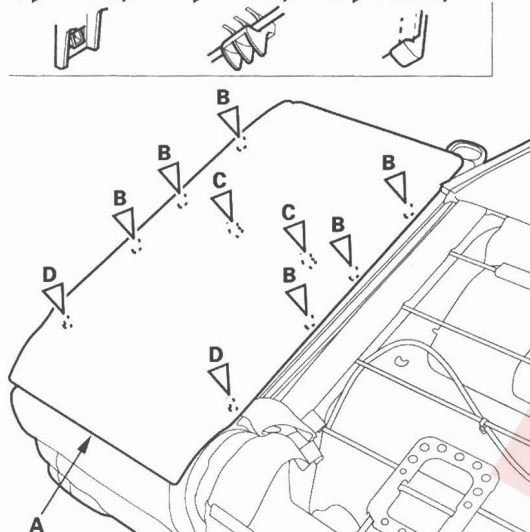


6. Release the hook strips (A), then pull the seat-back cover (B).

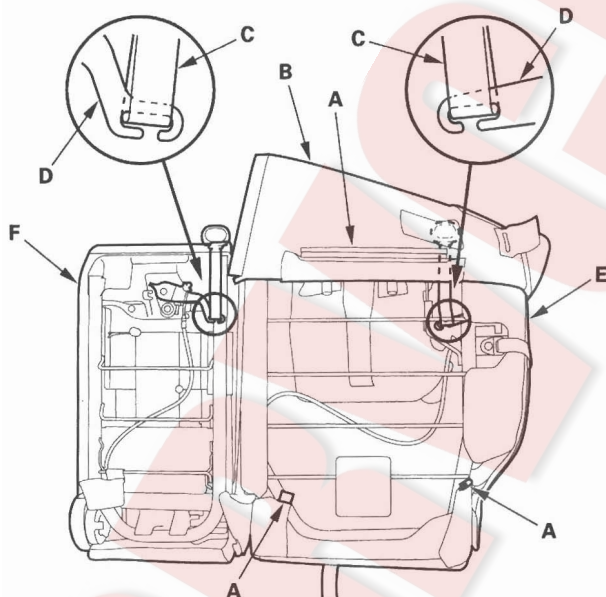

7. Release the straps (C) from the strap levers (D), then remove the strap out through the slots in the seat-back cover (E) and center through trim (F).


8. Pull out the right seat head restraint guides (A) and center seat head restraint guides (B) while pinching the end of the guides, and remove them.

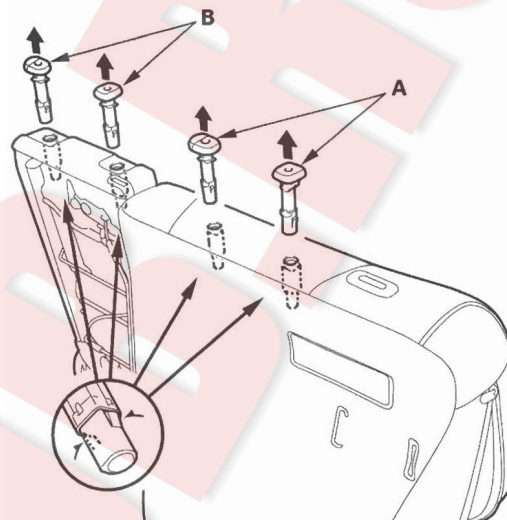

9. Remove the screws, and remove the center through trim (A) from the center seat-back frame.

**Fastener Locations**

▷ : Screw, 2

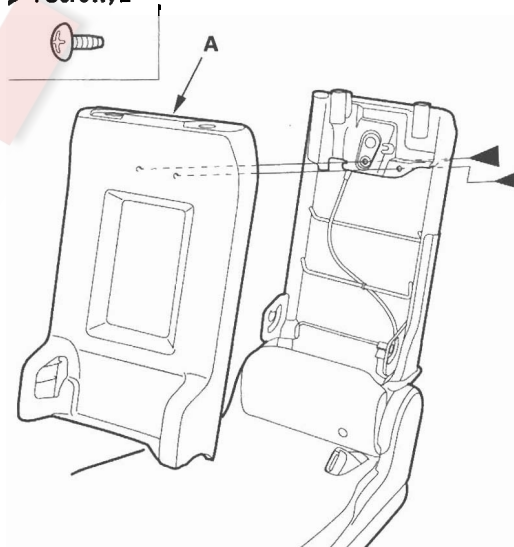

(cont'd)


# Seats

## Right Rear Seat Cover Replacement (cont'd)


10. Release the hook (A). Remove the screws, then remove the rear seat center lower (B) from the center seat-back frame (C).

### Fastener Locations

► : Screw, 2

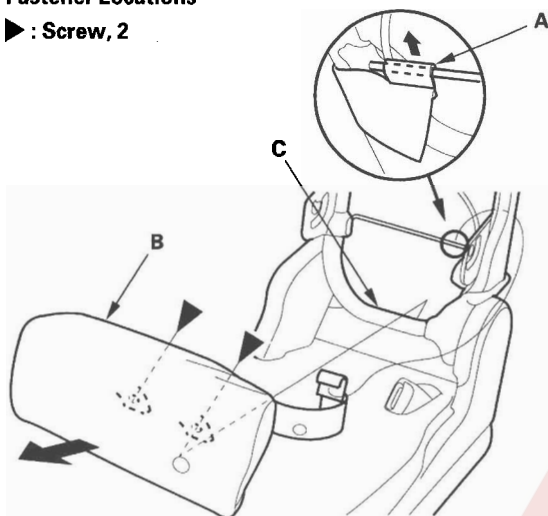


11. Separate the rear seat-back and the rear seat cushion.
12. Pull back the edge of the seat-back cover (A) all the way around, and release the clips (B), then remove the seat-back cover.

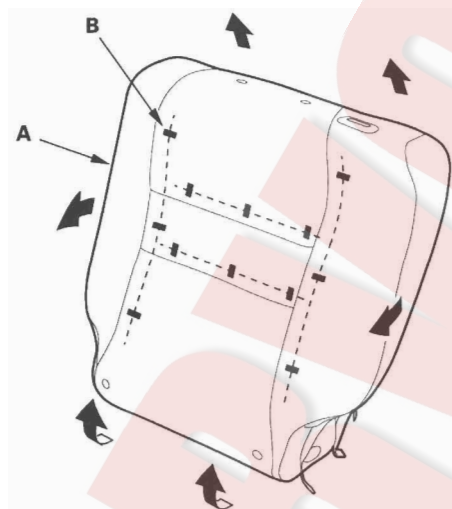

13. If necessary, remove the screw, then release the hooks (A), and remove the strap lever cover (B).


### Fastener Location

► : Screw, 1

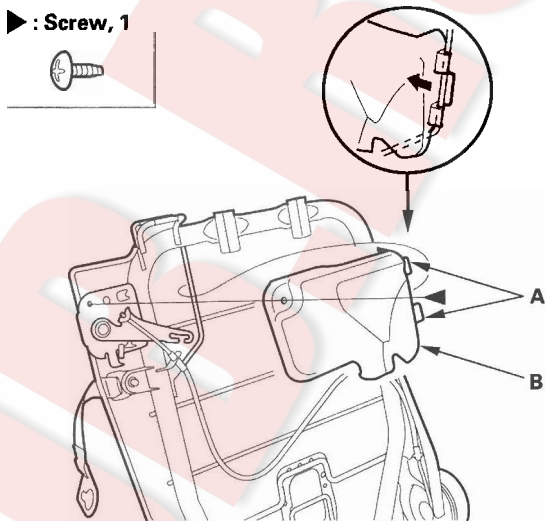

14. Install the cover in the reverse order of removal, and note these items:

- To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the clips and hook strips.
- Replace any clips (A) you removed with new ones. Install them with commercially available upholstery ring pliers (B).

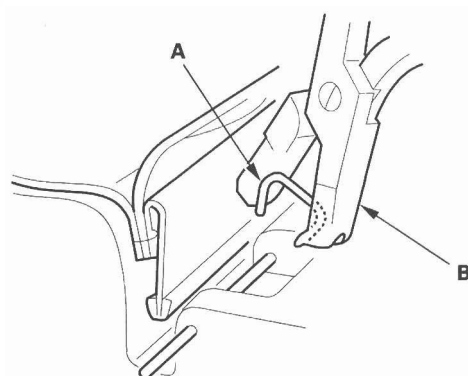




## Seat Cushion Cover

1. Remove the right rear seat (see page 20-135).
2. Gently pull out the right outer cover (A) and left outer cover (B) to detach the clips, and release the hooks (C), then remove the covers.


### Fastener Locations

▷ : Clip, 2

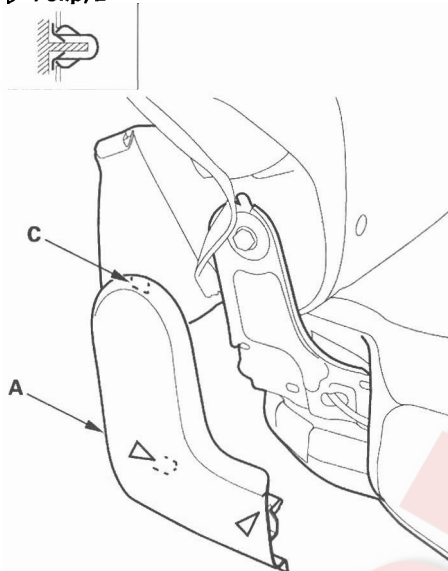

### Fastener Locations

▷ : Clip, 2

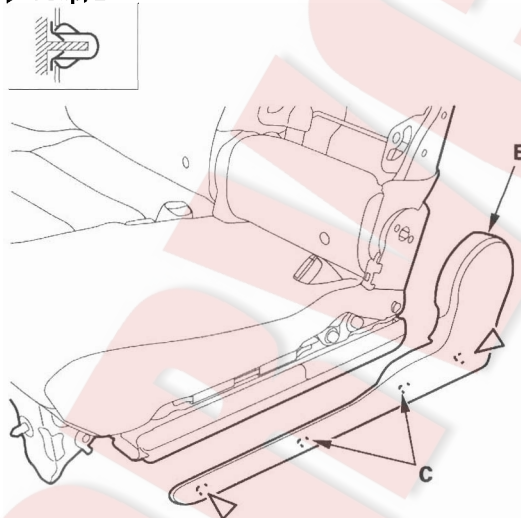


3. Remove the bolts (A, B, C) and screw (D) securing the seat-back (E) and seat cushion (F), then separate them.

### Fastener Locations

A ▷ : Bolt, 1    B ▷ : Bolt, 1    C ▷ : Bolt, 3



D ▷ : Screw, 1

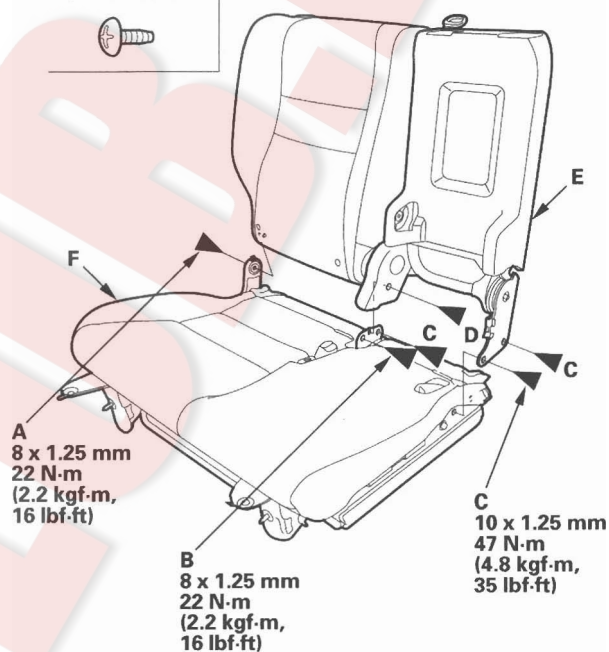

4. To allow the seat cushion to slide, use a screwdriver to close the latch.



(cont'd)




# Seats

## Right Rear Seat Cover Replacement (cont'd)

5. Slide both seat tracks (A) back fully.


- 1 Raise both mounting brackets (B), and place shop towels (C) between the brackets and the bottom cover (D).
- 2 Push the slide lever (E) down.
- 3 Slide both seat tracks back fully, taking care not to let the mounting brackets scratch the bottom cover.

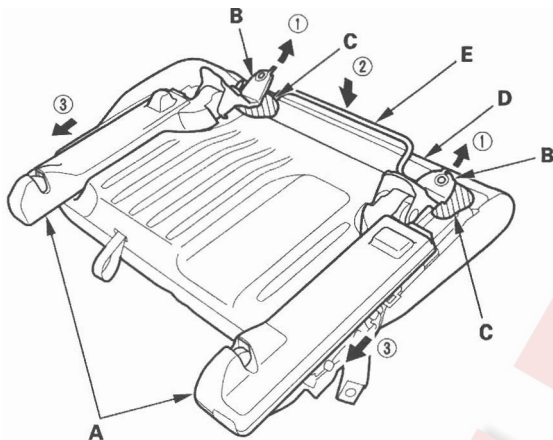

6. Remove the screw (A), then pull up the outer seat track cover (B) to detach the clips (C), and remove it. Remove the outer seat track cover (D). The left seat track is shown, the right seat track is similar.

### Fastener Locations


A ► : Screw, 1    C ► : Clip, 2

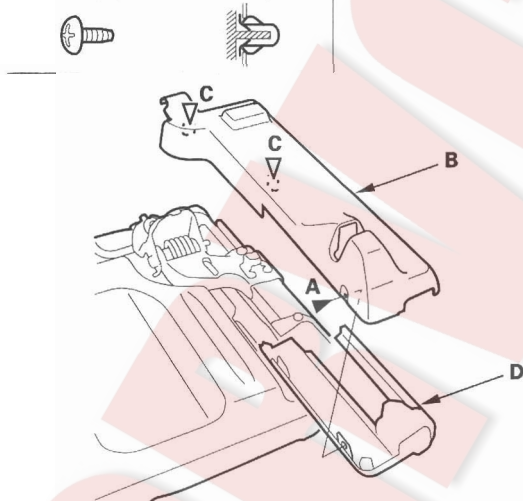

7. Remove the screws, then remove both dampers (A).

### Fastener Locations


► : Screw, 2

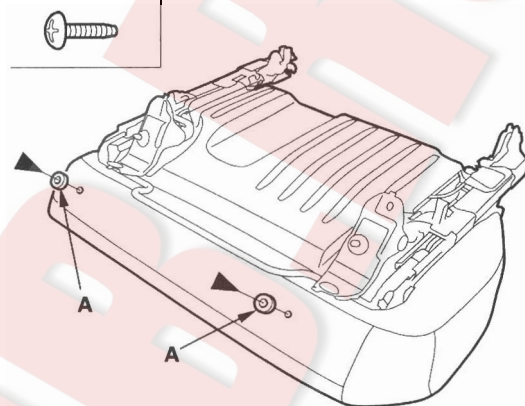

8. Slide both seat tracks (A) forward fully.

- 1 Raise both mounting brackets (B), and hold them.
- 2 Push the slide lever (C) down.
- 3 While holding both mounting brackets, slide both seat tracks forward fully.

NOTE: While sliding both seat tracks, keep both mounting brackets raised securely so they do not spring back.

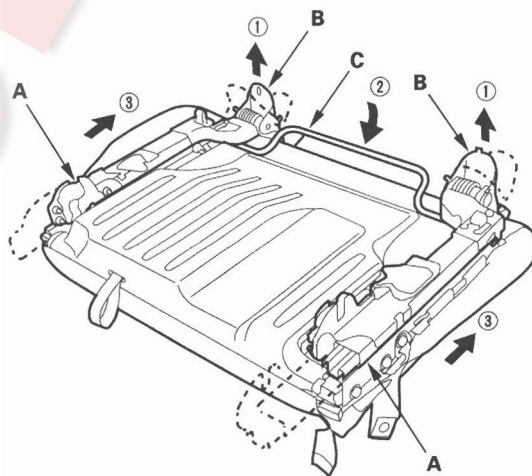







9. Pull back the rear edge of the seat cushion cover (A) to release it from the hooks (B), and remove the screws.

**Fastener Locations**


► : Screw, 5

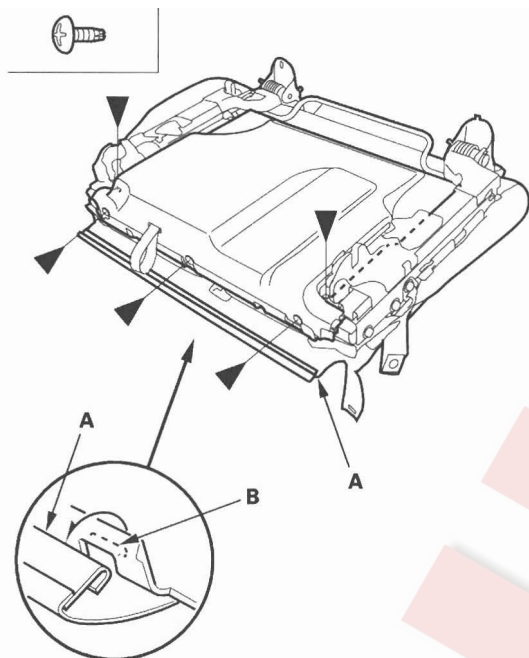

10. While pushing the slide lever (A) down, remove the undercover (B) by pulling it to release the hooks (C). Pass the strap (D) through its slot, and pass both side cables (E) through the side slots in the cover. Take care not to kink the cables.

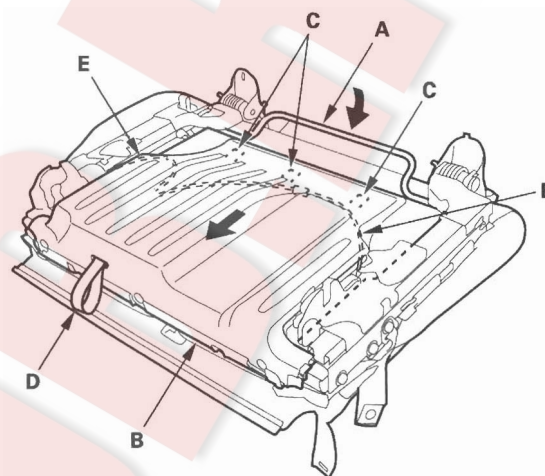

11. Release all of the hook strips (A).

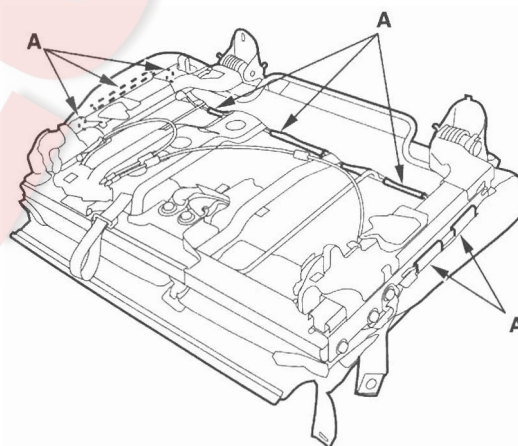


(cont'd)


# Seats

## Right Rear Seat Cover Replacement (cont'd)

12. Remove the rear seat belt buckle and center seat belt detachable anchor (see step 3 on page 24-9).
13. Remove the seat cushion cover (A) with the seat cushion pad from the seat cushion frame (B). Pass the center seat belt buckle (C) through a hole in the seat cushion cover.

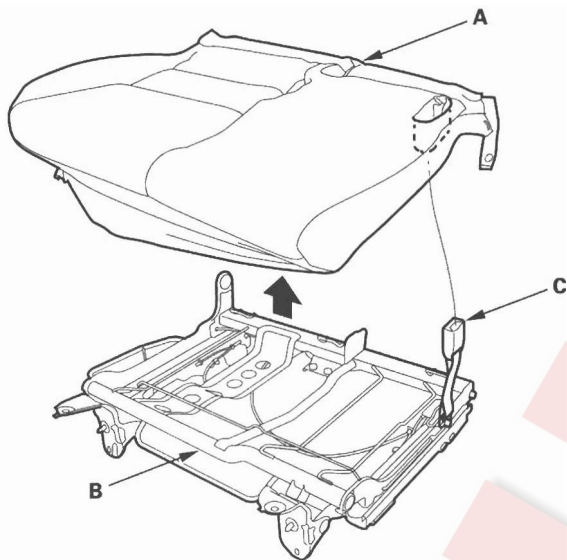


14. Pull back the edge of the seat cushion cover all the way around, and release the clips (A), then remove the seat cushion cover (B).

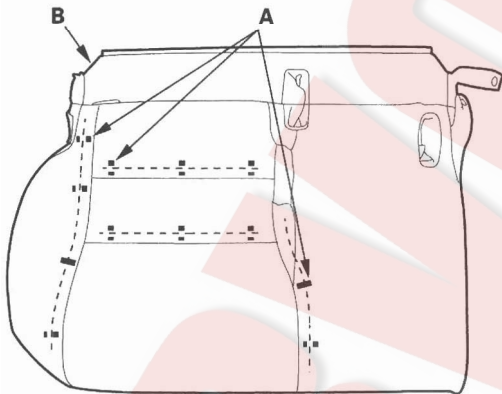

15. Install the cover in the reverse order of removal, and note these items:

- To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the clips and hook strips.
- Replace any clips (A) you removed with new ones. Install them with commercially available upholstery ring pliers (B).

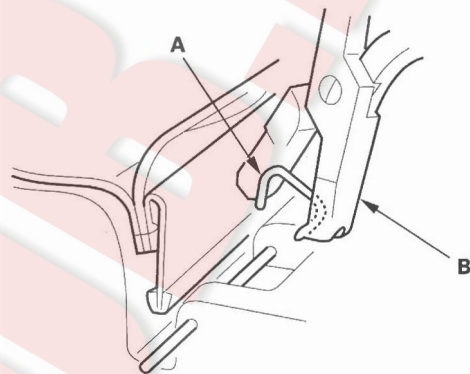




## Left Rear Seat Cover Replacement

### NOTE:


- Take care not to tear the seams or damage the seat covers.
- Put on gloves to protect your hands.

### Seat-back Cover


1. Remove the left rear seat (see page 20-135).
2. Separate the rear seat-back and the rear seat cushion (see step 3 on page 20-139).
3. Release the hooks (A), then remove the tether anchor cover (B).

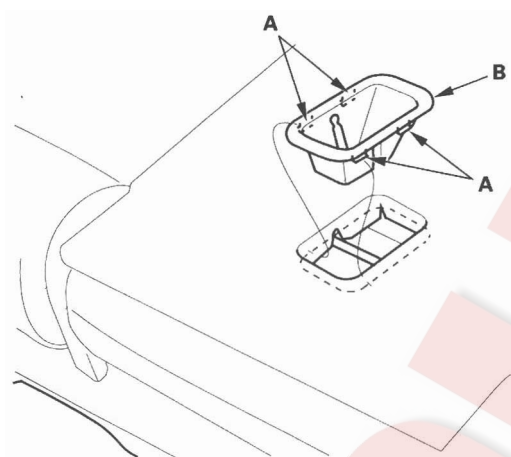

4. Release the bottom hook (A), unzip the seat-back cover (B), then fold back the cover. Pull the seat-back strap (C) secured to the seat-back frame inside the seat-back cover through the slot (D).

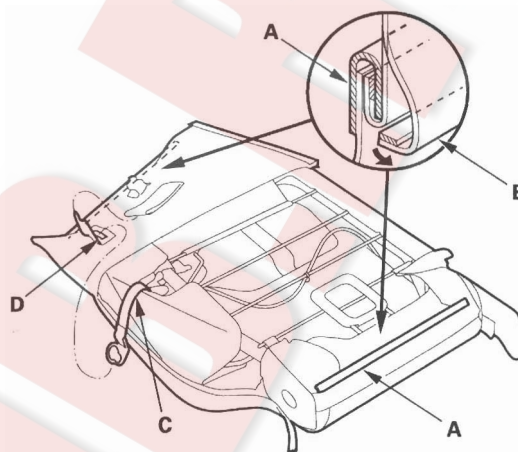

5. Release the hook strips, then pull the seat-back cover.
6. Pull out the head restraint guides (A) while pinching the end of the guides, and remove them.

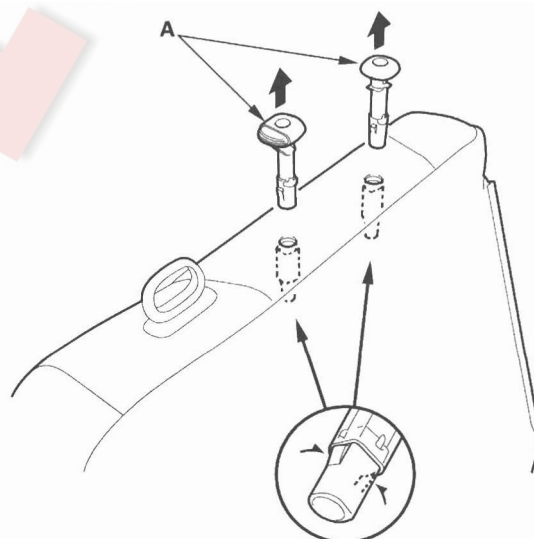


(cont'd)


# Seats

## Left Rear Seat Cover Replacement (cont'd)

7. Release the strap (A) from the strap lever (B), then remove the strap out through the slot (C) in the strap guide (D). From the seat-back inside: Release the hooks (E) of the strap guide from the wire frame (F), then push out the strap guide.

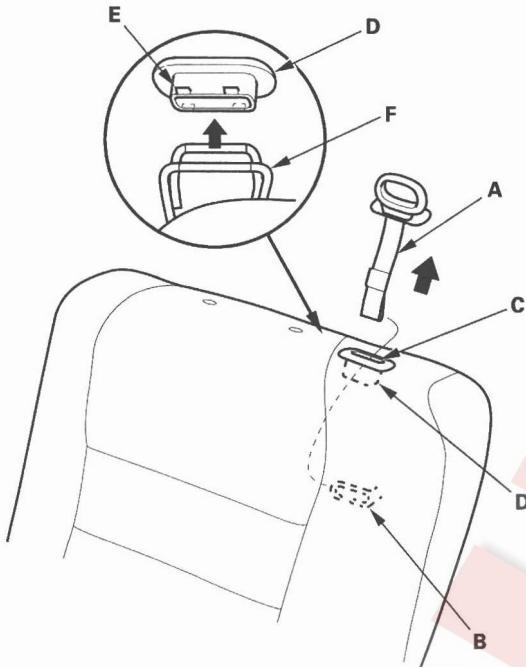


8. Pull back the edge of the seat-back cover all the way around, and release the clips (A), then remove the seat-back cover (B).

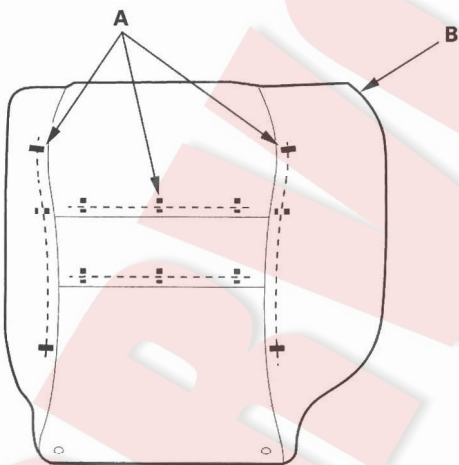

9. Install the cover in the reverse order of removal, and note these items:

- To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the clips and hook strips.
- Replace any clips (A) you removed with new ones. Install them with commercially available upholstery ring pliers (B).

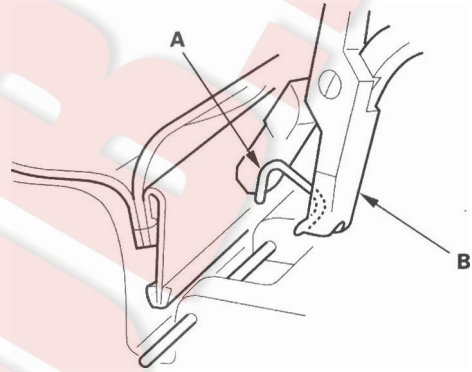






## Seat Cushion Cover

1. Remove the left rear seat (see page 20-135).
2. Gently pull out the left outer cover (A) and right outer cover (B), then detach the clips, and remove them by releasing the hooks (C).


### Fastener Locations

▷ : Clip, 2

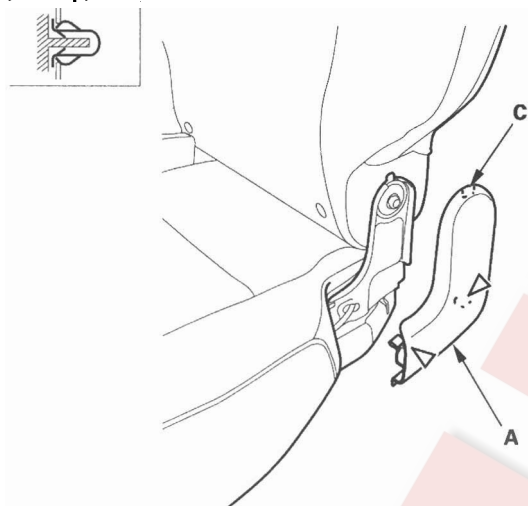

### Fastener Locations


▷ : Clip, 2

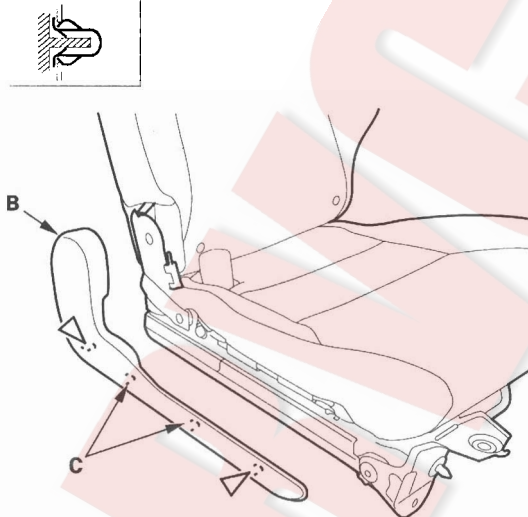


3. Remove the bolts (A, B) securing the seat-back (C) and seat cushion (D), then separate them. If necessary, remove the bushing (E).

### Fastener Locations

A ▷ : Bolt, 1 B ▷ : Bolt, 2

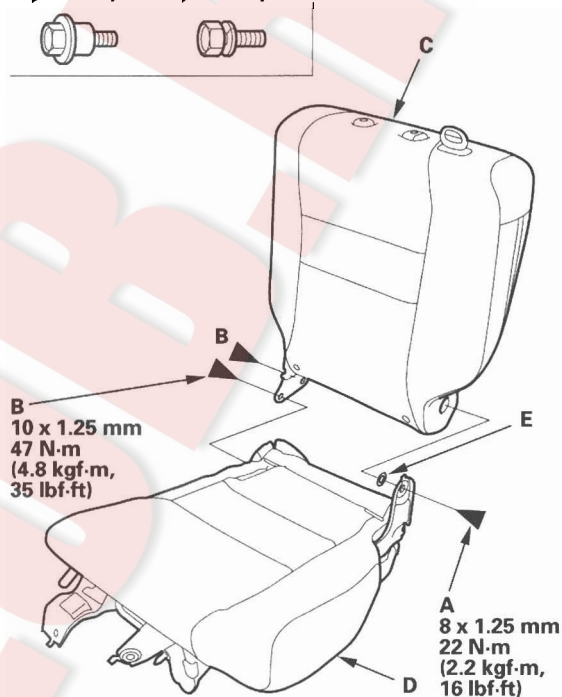

4. To allow the seat cushion to slide, use a screwdriver to close the latch.

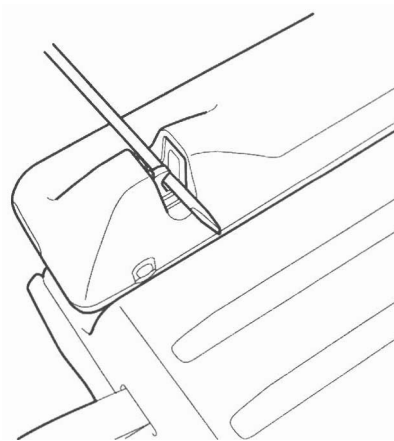

(cont'd)

# Seats

## Left Rear Seat Cover Replacement (cont'd)


5. Slide both seat tracks back fully (see step 5 on page 20-140).

NOTE: While sliding the outer seat track, keep the outer mounting bracket raised securely so it does not spring back.

6. Remove the outer seat track cover (see step 6 on page 20-140).
7. Remove the screw (A), then pull up the inner seat track cover (B) to detach the clips (C), and remove it. Remove the inner seat track end cover (D).

### Fastener Locations

A ► : Screw, 1    C ► : Clip, 2

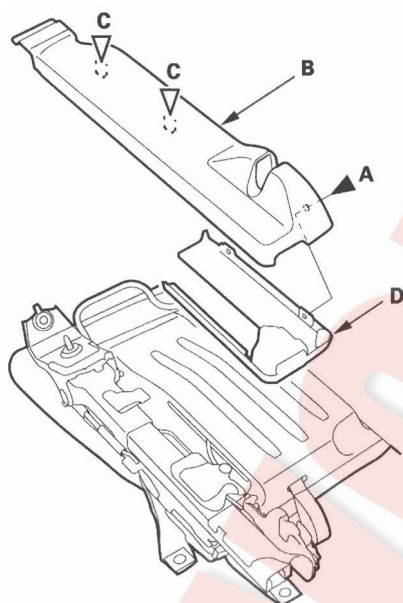

8. Remove both dampers and both damper covers (see step 7 on page 20-140).


9. Slide both seat tracks forward fully (see step 8 on page 20-140).

NOTE: While sliding the outer seat track, keep the outer mounting bracket raised securely so it does not spring back.

10. Pull back the rear edge of the seat cushion cover (A) to release it from the hooks (B), and remove the screws.


### Fastener Locations

► : Screw, 4

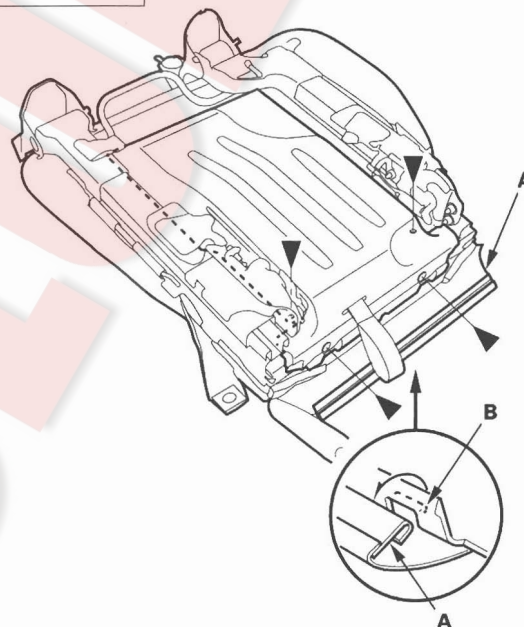





11. While pushing the slide lever (A) down, remove the bottom cover (B) by pulling it to release the hooks (C). Pass the strap (D) through the slot, and pass both side cables (E) through the side slits in the cover. Take care not to kink the cables.

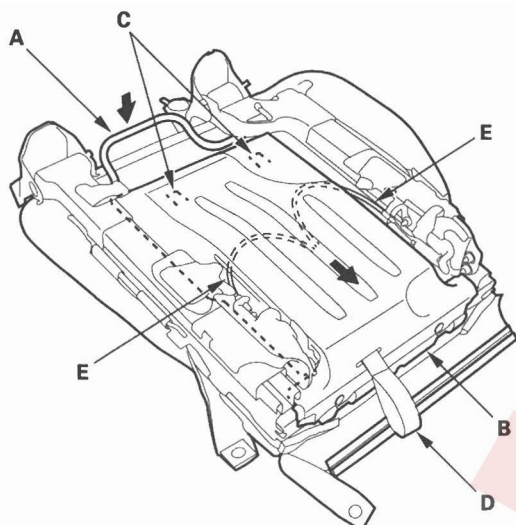


12. Release all of the hook strips (A).

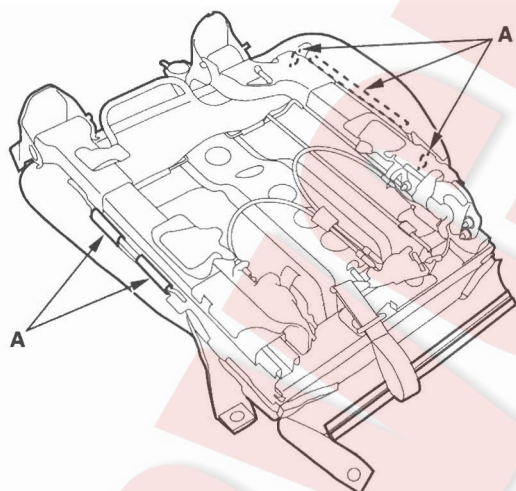

13. Remove the seat cushion cover (A) with the seat cushion pad from the seat cushion frame (B). Pass the seat belt buckle (C) through the hole in the seat cushion cover.

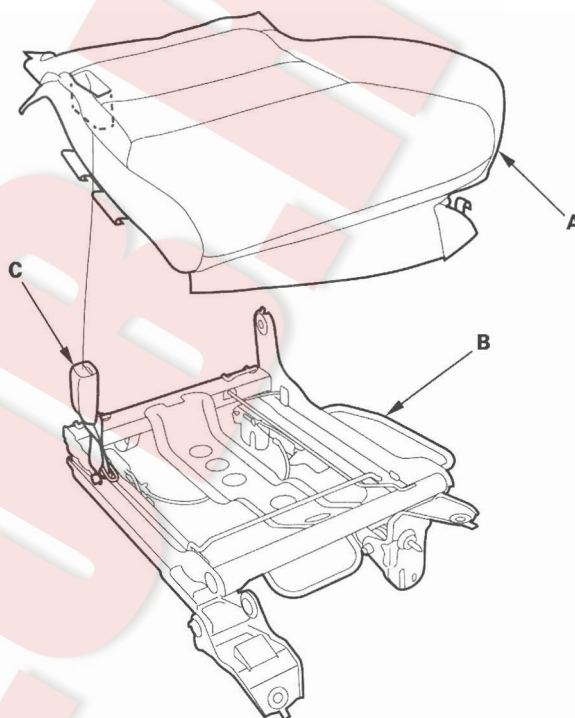

14. Pull back the edge of the seat cushion cover (A) all the way around, and release the clips (B), then remove the cover.

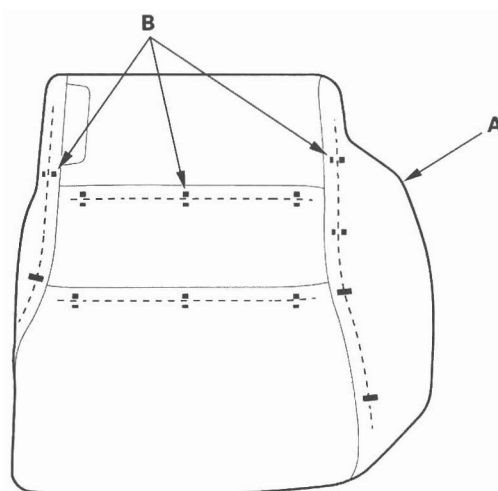


(cont'd)

# Seats

## Left Rear Seat Cover Replacement (cont'd)

15. Install the cover in the reverse order of removal, and note these items:
- To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the clips and hook strips.
  - Replace any clips (A) you removed with new ones. Install them with commercially available upholstery ring pliers (B).

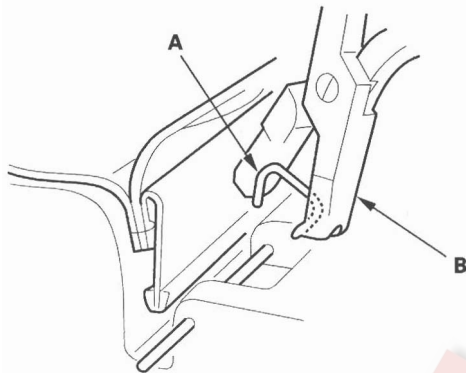


## Right Rear Seat-back Lock Control Cable Replacement

### NOTE:

- Take care not to tear the seams or damage the seat covers.
- Put on gloves to protect your hands.

1. Remove the right rear seat (see page 20-135).
2. Remove the right seat-back assembly from the seat cushion (see step 3 on page 20-139).
3. Remove the tether anchor cover (see step 3 on page 20-143).
4. Release the bottom hook, unzip the seat-back cover, then fold back the cover (see step 4 on page 20-136).
5. Release the strap from the strap lever (see step 7 on page 20-137).
6. Remove the head restraint guides (see step 8 on page 20-137).
7. Remove the seat-back cover/pad from the frame (see step 12 on page 20-138).
8. Remove the strap lever cover (see step 13 on page 20-138).
9. Disconnect the seat-back control cable (A) from the inner recline adjuster (B) and the outer recline adjuster (C). Release the clamp (D), then remove the cable.

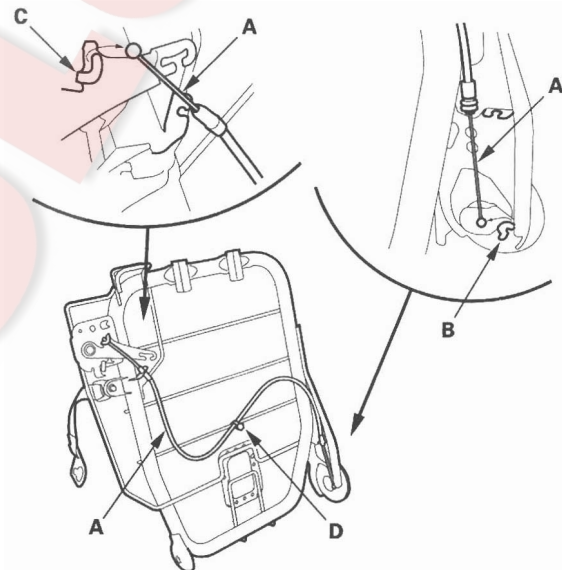

10. Install the cable in the reverse order of removal, and note these items:
- Replace the clamp you removed with a new one.
  - To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the hooks.