


2. Position the front base carrier and rear base carrier on the vehicle as shown and secure them by tightening the eight special bolts using a torx wrench. Make sure the rubber alignment stud is positioned through the hole in the base carrier. Torque the special bolts to 20 N·m (2.0 kgf·m, 14 lbs·ft).

Front bar is indicated with a seal.

Please note right side and left side on each bar.

3. Install the four covers on the base carrier.

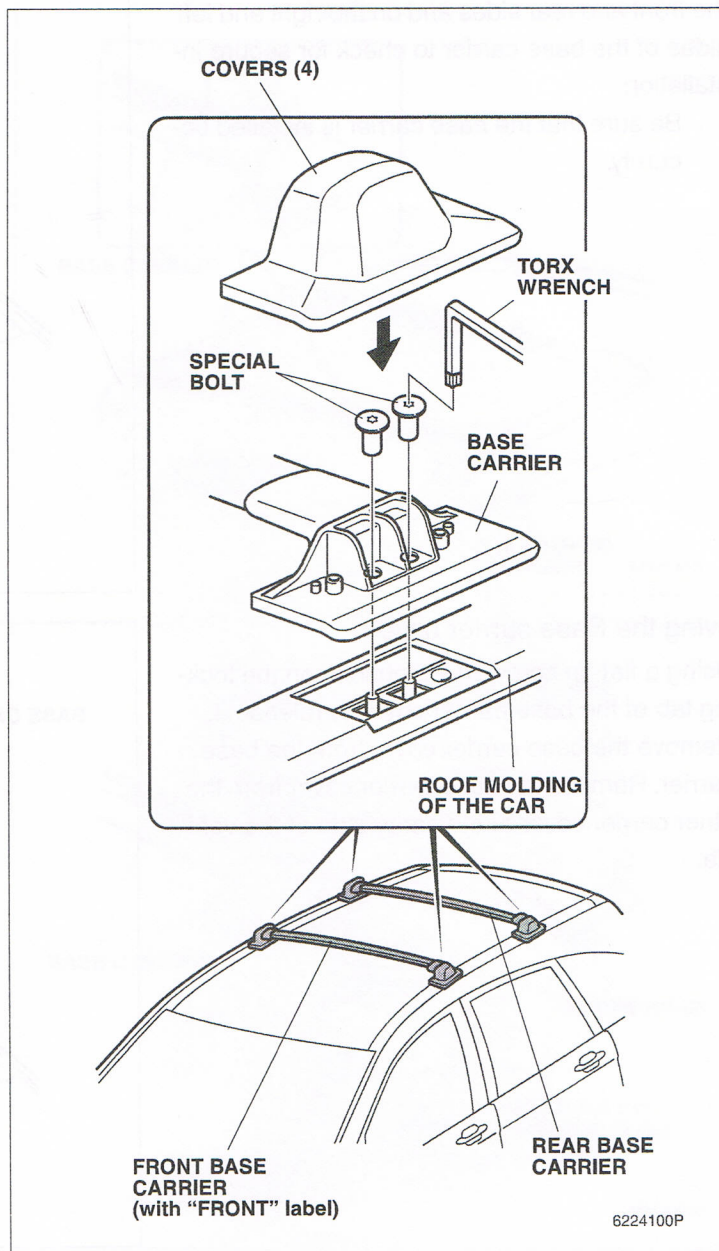

4. After installing the cover, check that the rubber of the base carrier is not protruding to the surface.
5. If the rubber of the base carrier is protruding to the surface, push the rubber in using a plastic spatula.

