


# Rear Driveshafts


## Reassembly (cont'd)

18. Install the new set ring into the driveshaft groove.

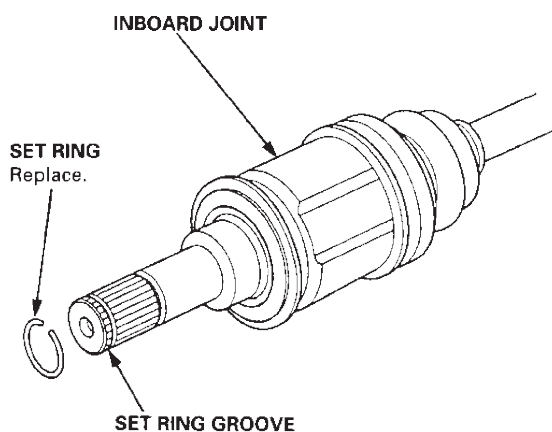


## Installation

1. Install the outboard joint into the trailing arm.

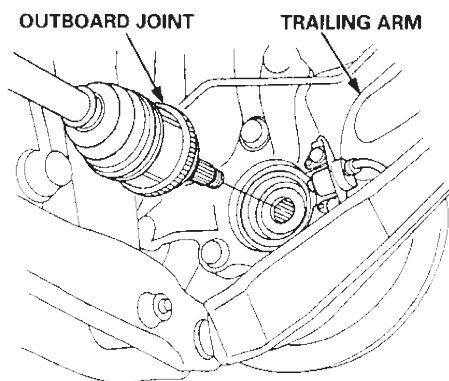

2. Install the rear driveshafts into the rear differential assembly (see section 15).
3. Apply a small amount of engine oil to the seating surface of the new spindle nut.

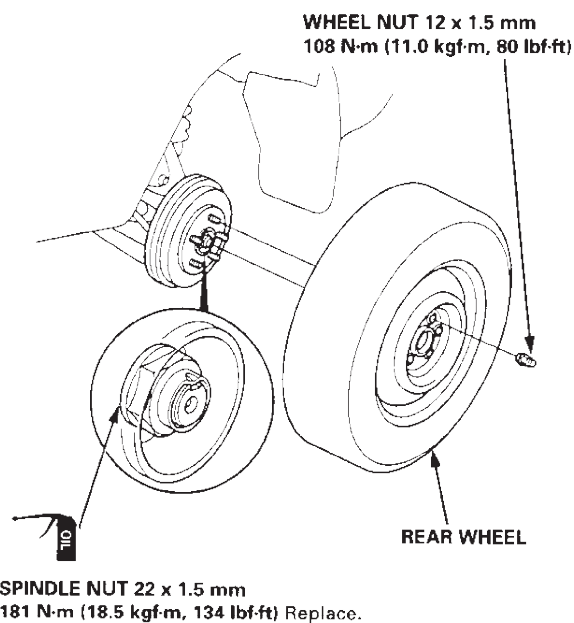

4. Install a new spindle nut, then torque the nut. After tightening, use a drift to stake the spindle nut shoulder against the driveshaft.
5. Clean the mating surfaces of the brake disc and the wheel, then install the rear wheel, and torque the wheel nuts.