


Hazard Warning Switch Test

1. Remove the center panel ([see page 20-89](#)).
2. Disconnect the 10P connector (A) from the hazard warning switch (B).

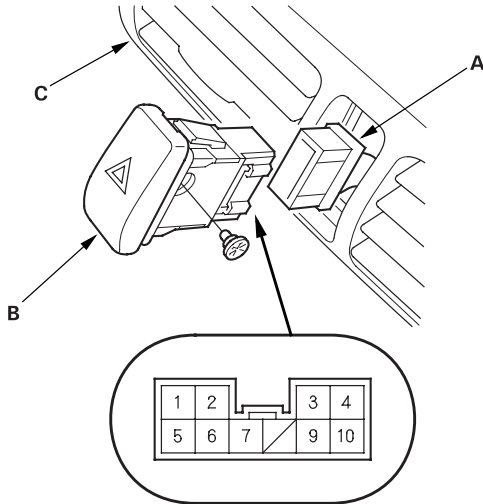

3. Push out the hazard warning switch from behind the center panel (C).
4. Check for continuity between the terminals in each switch position according to the table.

Terminal	5	6	1	2	3	4	7	9	10
Position									
OFF	○	○	○	○					
ON	○	○		○	○	○	○	○	○

5. If the continuity is not as specified, replace the illumination bulb (D) or the switch.
6. Install the switch in the reverse order of removal.