



# HONDA

## INSTALLATION INSTRUCTIONS

Accessory  
**RUNNING BOARD**  
P/N08L33-SWA-100

Application  
**CR-V**


Publications No.  
**All 32940-33867**

Issue Date  
**OCT 2006**


NOTE: Running boards cannot be installed if equipped with front splash guards.

### PARTS LIST


Running board (Left)

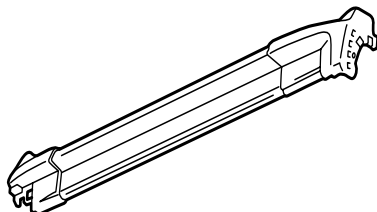


Running board (Right)

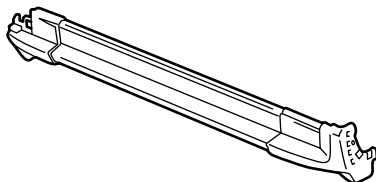

4 Brackets A

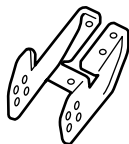

4 Brackets B

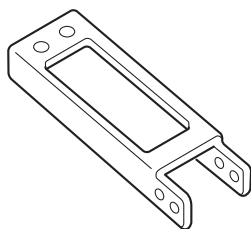

32 Flange bolts, 8 x 20 mm



16 Flange nuts, 6 mm



16 Flange nuts, 8 mm



### TOOLS AND SUPPLIES REQUIRED


Phillips screwdriver

Clip remover

Utility knife

Torque wrench

### Illustration of the Running Boards on the Vehicle

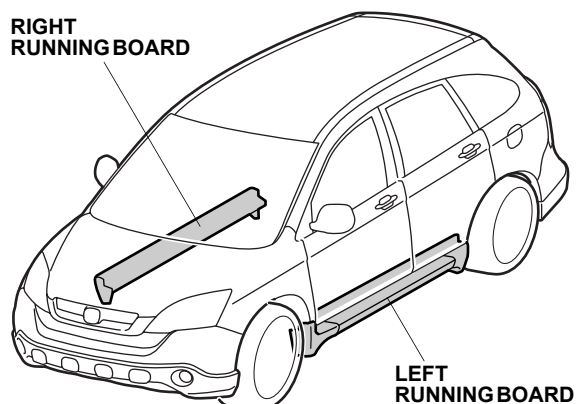


### INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


#### NOTE:

- Thoroughly clean the bottom of the body from the rear wheels to the front wheels.
- Be careful not to damage the body paint finish. To prevent damage, place a blanket under the side step board during the installation.
- These instructions show the left side running board being installed; the same procedure applies to installing the right side running board.


1. Turn the steering wheel all the way counterclockwise.

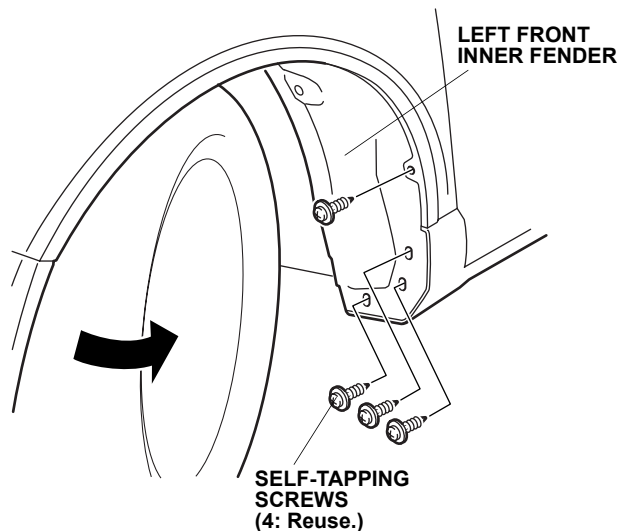


2. Remove and retain the four self-tapping screws from the left front inner fender.
3. Remove and retain the two self-tapping screws from the left rear inner fender.

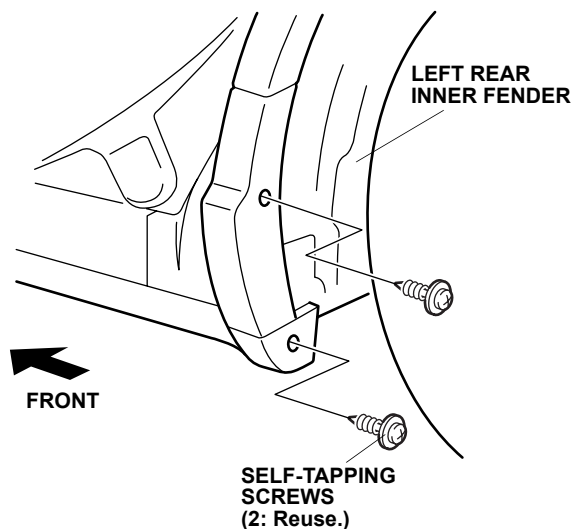

4. Remove the four clips under the left side sill panel.

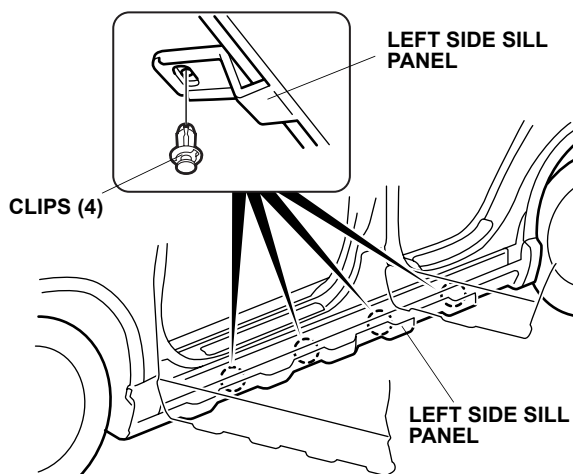


5. Pull out on the front of the left rear wheel arch protector to release the clip.

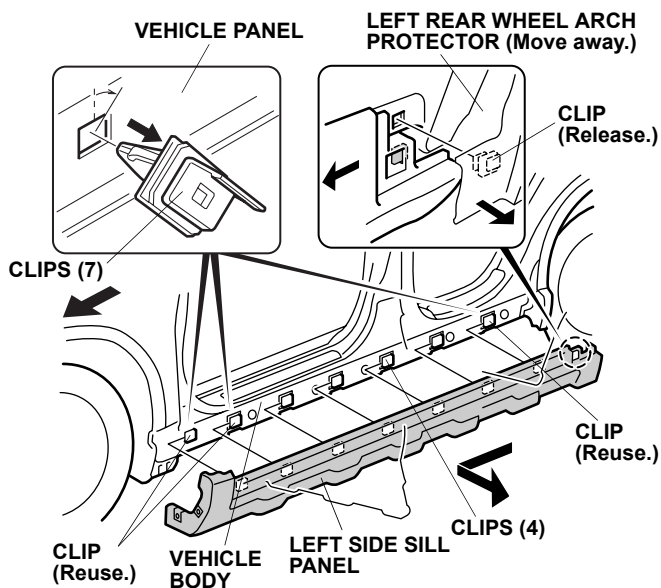


6. With the left rear wheel arch protector pulled away from the side sill trim, pull the left side sill trim forward to release the fire retaining tabs and two clips. Remove the left side sill trim.
7. Remove three side sill trim clips, two at the front and one at the rear.


8. Remove the left under-cover from under the vehicle (four clips and three bolts).

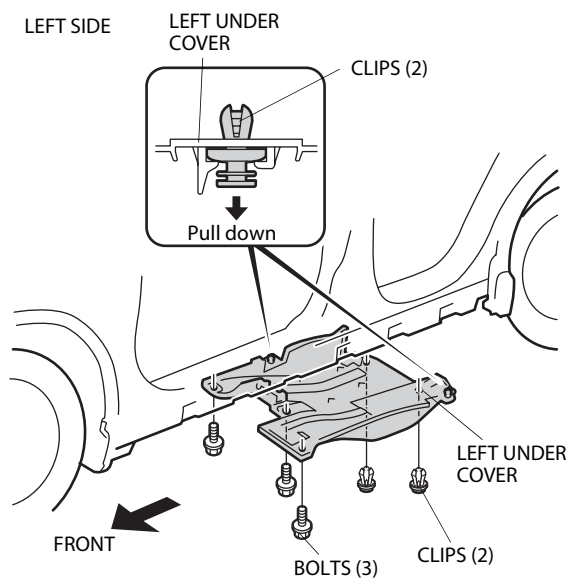


9. Remove the right under cover the same way.

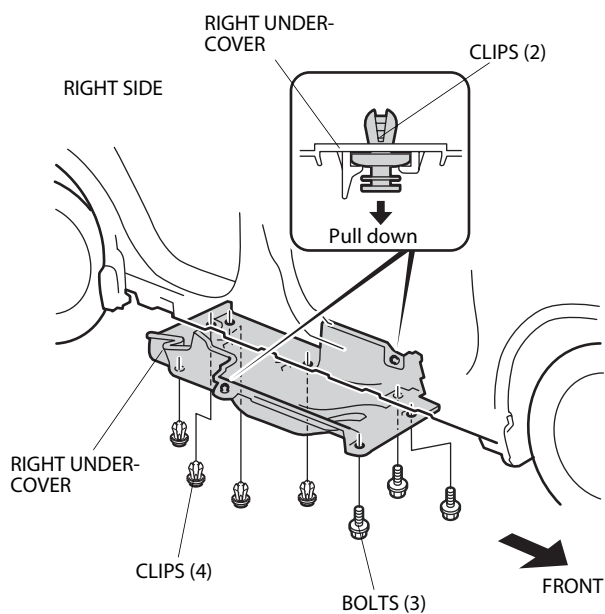


10. Using a utility knife cut out the left under-cover along the mark on the inner side of the under-cover. Remove any.

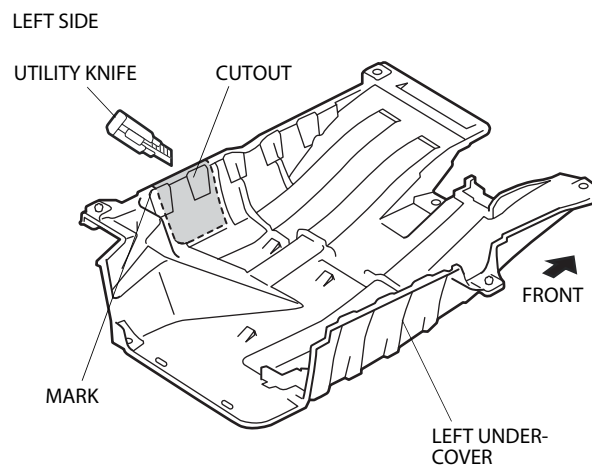


11. Cut out the right under-cover the same way.

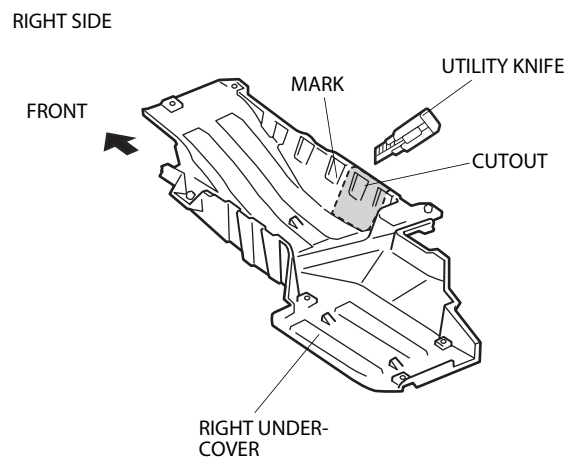


12. Remove the bracket from the left side sill panel (two self-tapping screw).

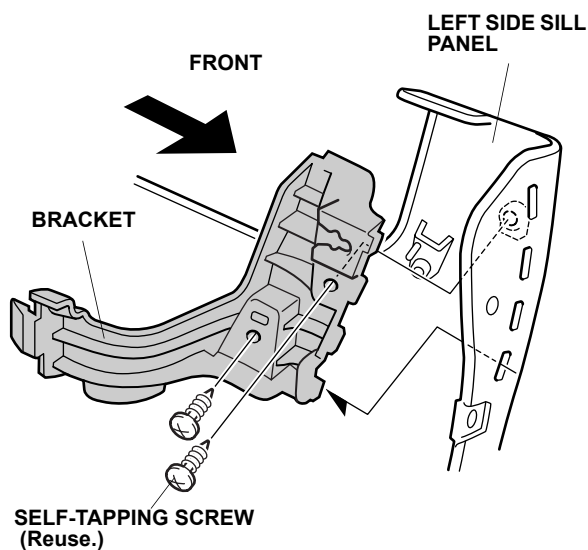


13. Install the bracket to the left running board with the screw removed in the above step.

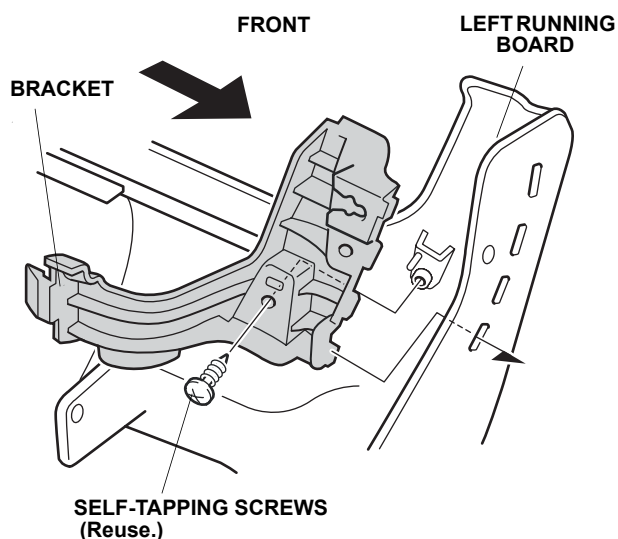


14. Remove the two spring nuts and three clips from the left side sill panel and install them on the left running board in the areas shown.

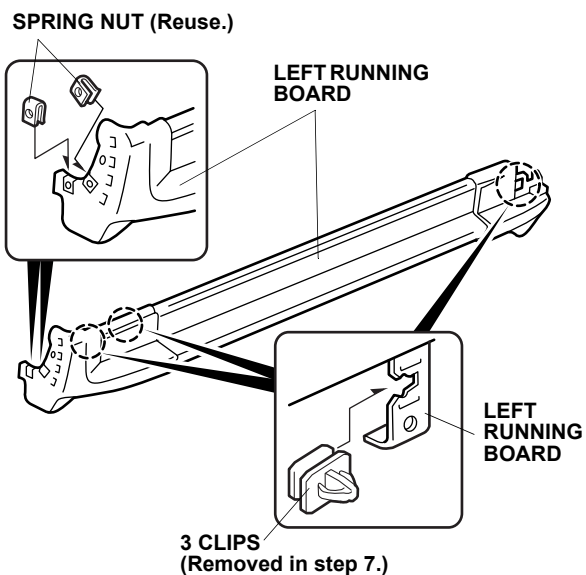


15. Install the three clips (removed in step 7) into position on the left running board.
16. Position the two brackets A on the left running board by aligning the holes in the brackets A with the bolts on the running board. Secure the brackets A with the eight 6 mm flange nuts, but don't tighten the flange at this time.

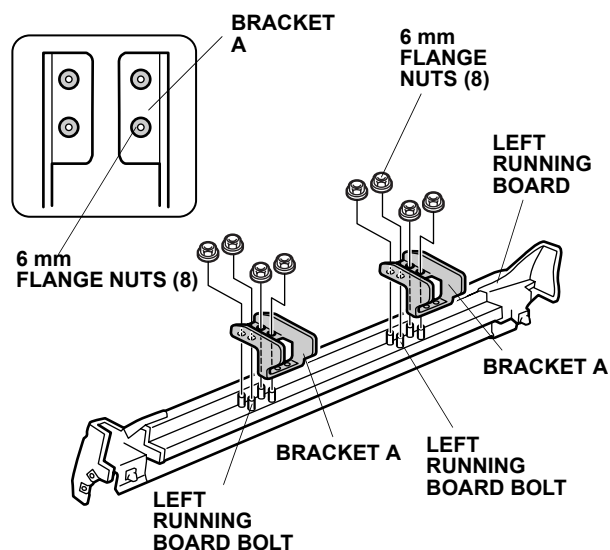

17. Position the left running board on the vehicle, and secure brackets A using four flange bolts. Make sure the inner fender fits on the inside of the left running board end cap. Align the clips installed in step 15 to the holes in the body panel, and push them into position.

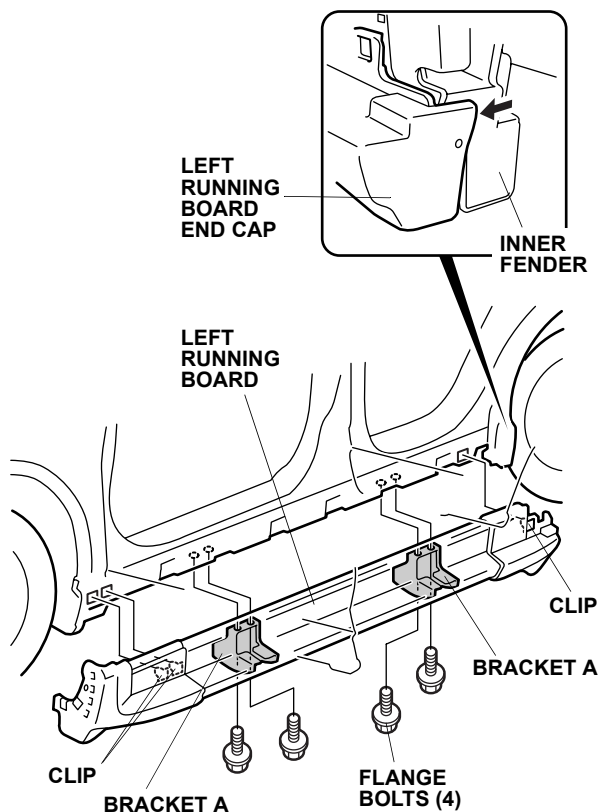


18. Install each bracket B into position on the vehicle, and secure each bracket with two flange bolts.

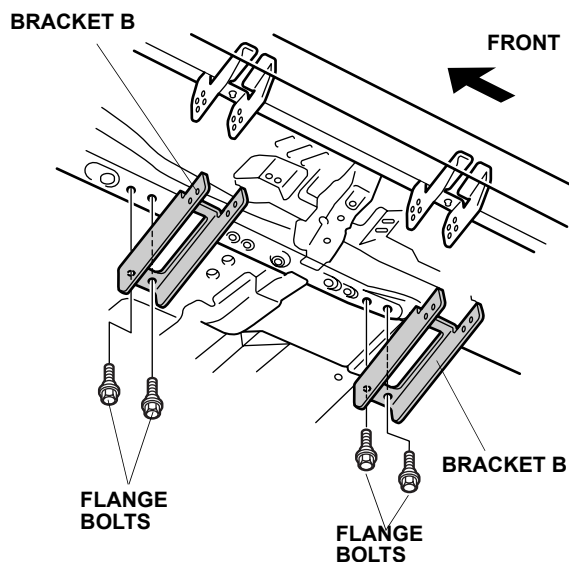


19. Secure bracket A and B using eight flange bolts and an eight 8 mm flange nuts.

*Front bracket:* Assemble by aligning the hole in bracket B with the lower hole in bracket A.


*Rear bracket:* Assemble by aligning the hole in bracket B with the upper hole in bracket A.

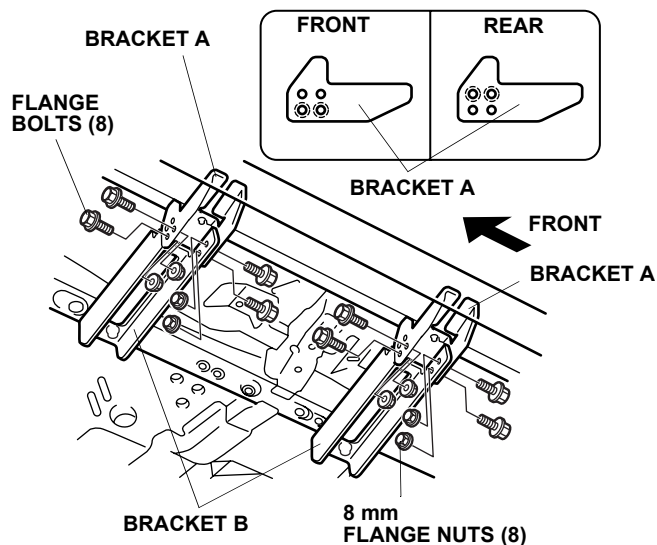

20. Gently pull out on the fender arch to release the clip and install the front of the left running board under the inner front fender using the four self-tapping screws removed in step 2.

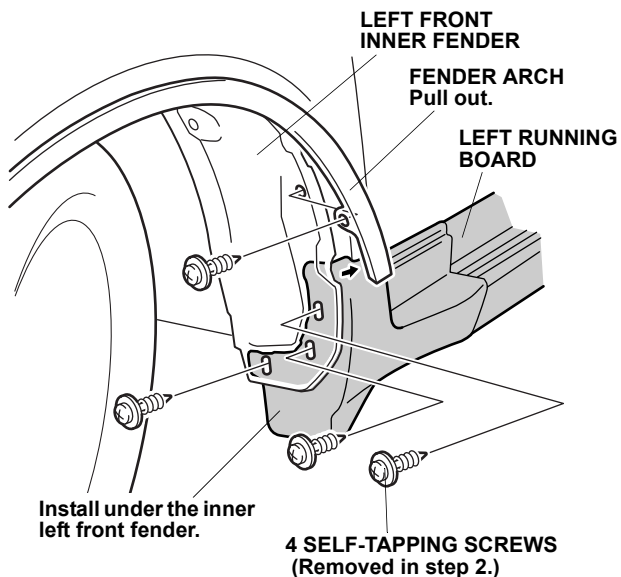

21. Attach the left rear fender arch molding to the running board. Secure the running board using the two self-tapping screws removed in step 3.

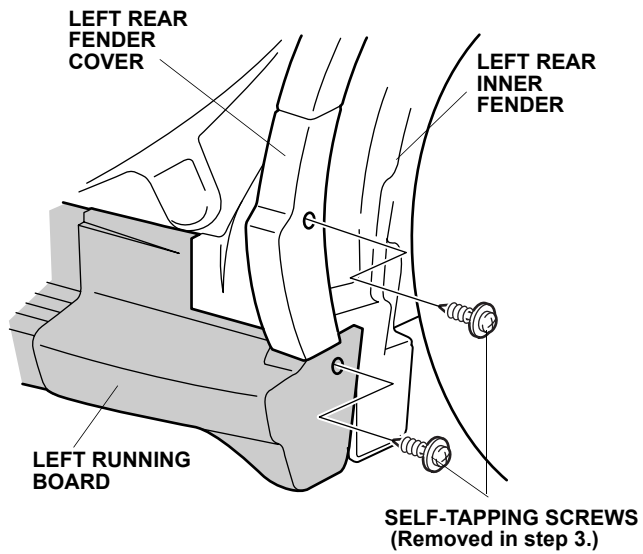

22. Repeat the steps 1 through 21 to install the running board on the right side of the vehicle.
23. Reinstall the under covers.